


GRAIN & FRAME

Solid Oak Dining Chair With Upholstered Seat Pad

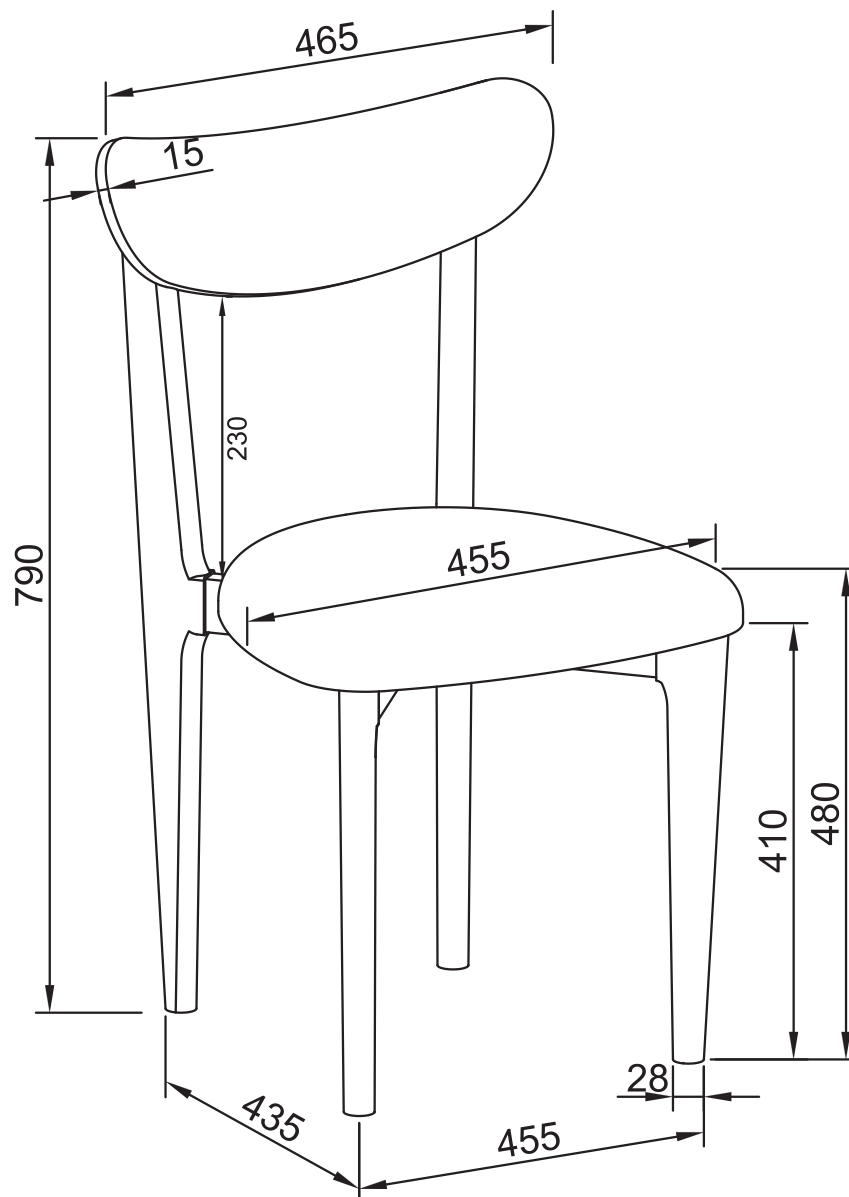


IMPORTANT:

Put all screws into place before tightening each one gradually in sequence.




You will need:



Around 30 minutes

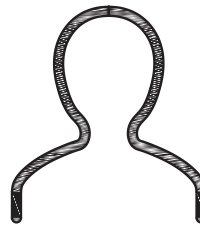


1 person

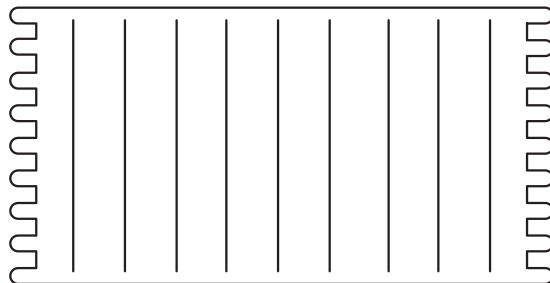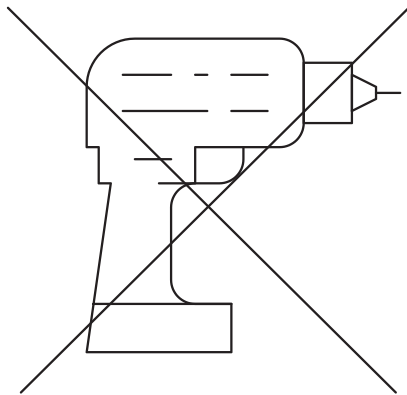


Place your product on a soft surface when assembling



Fittings and parts checklist

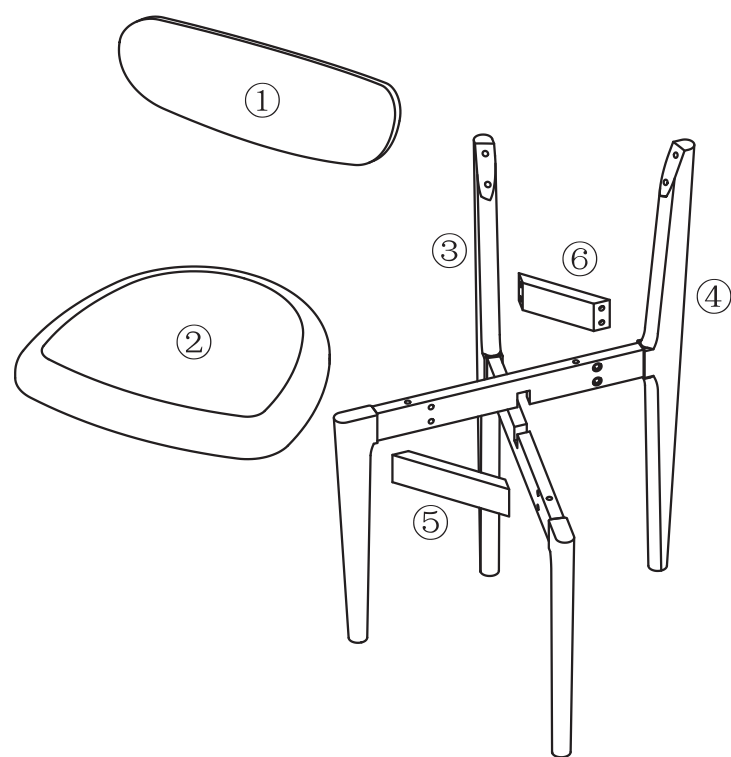

No	Qty	mm
1	1	530x150x15
2	1	440x455x70
3	1	590x28x755
4	1	590x28x755
5	1	260x50x20
6	1	185x50x20


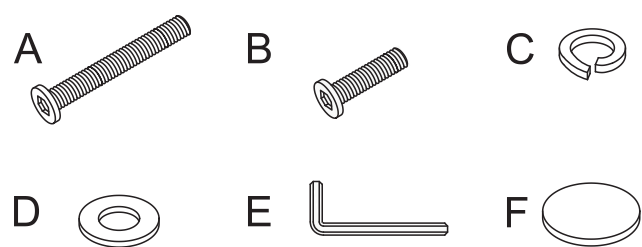


No	Qty	mm
A	4	M6x50
B	12	M6x20
C	16	Ø6xØ12
D	16	Ø6
E	1	M4
F	4	Ø20x3

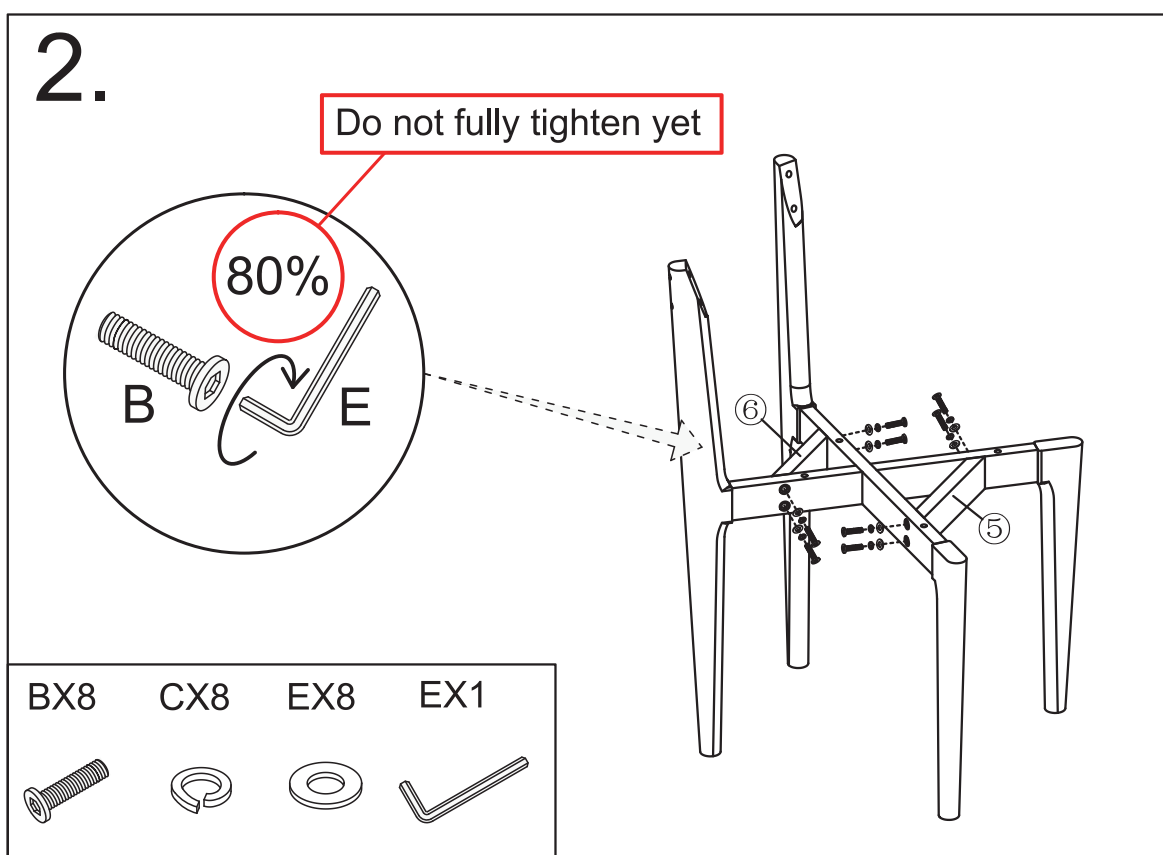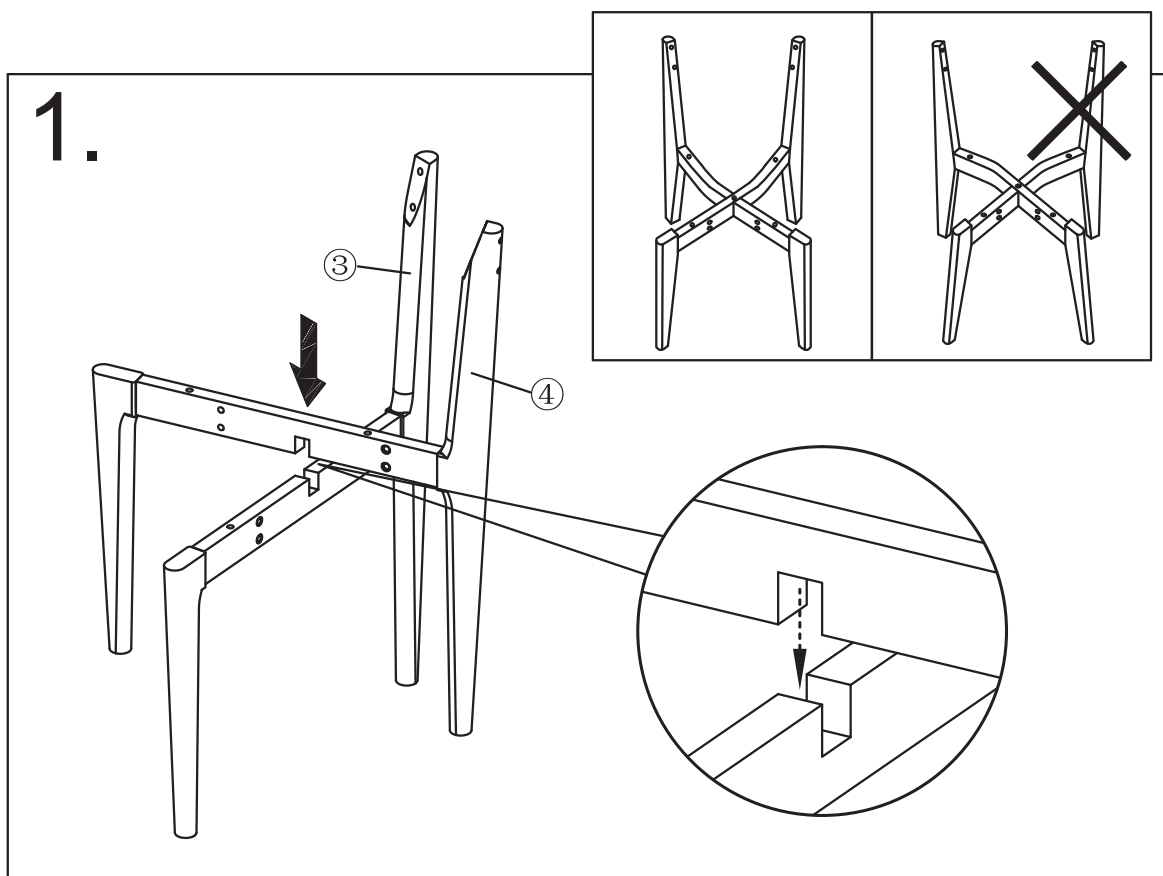

3.

Do not fully tighten yet

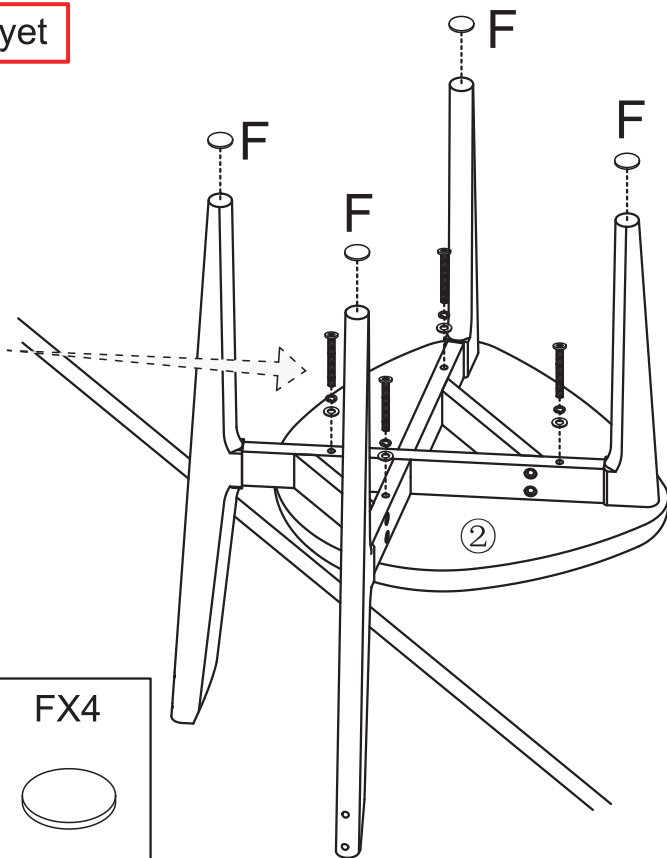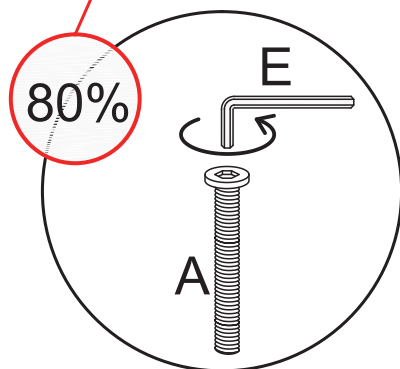


AX4

CX4

EX4



EX1

FX4



4.

Do not fully tighten yet

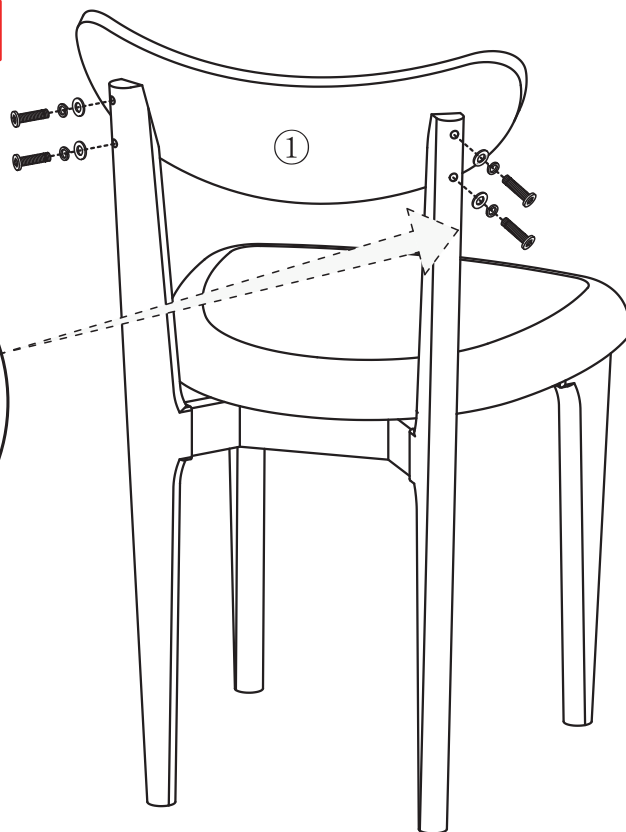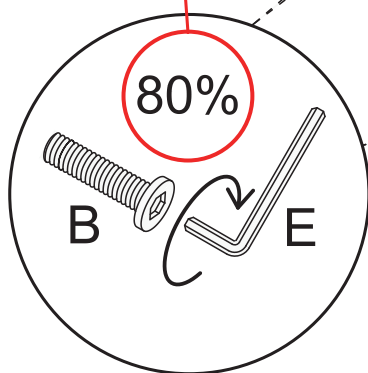

BX4

CX4



EX4

EX1



5.

Fully tighten now

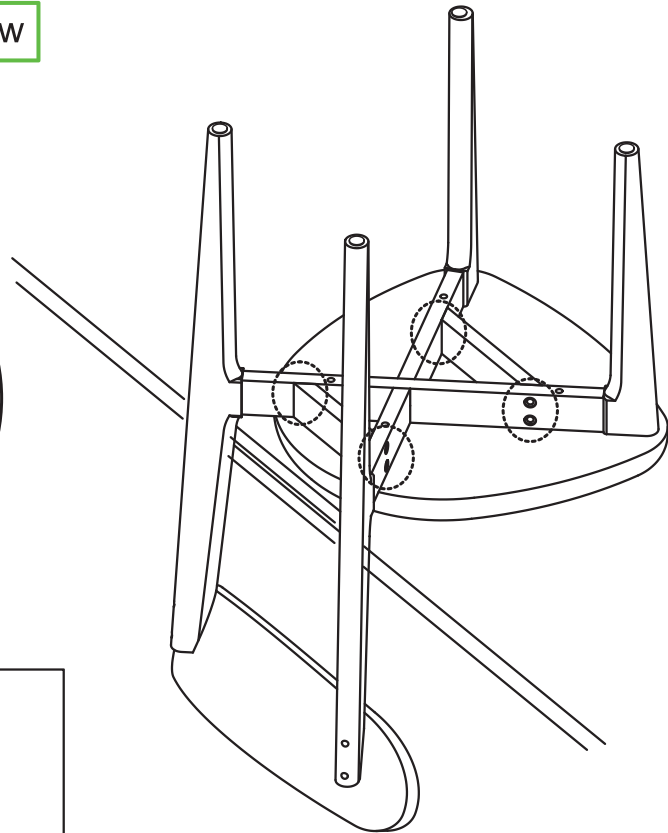
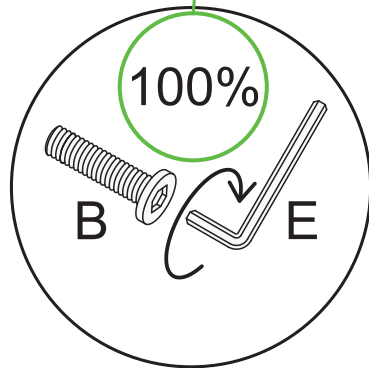


EX1



6.

Fully tighten now

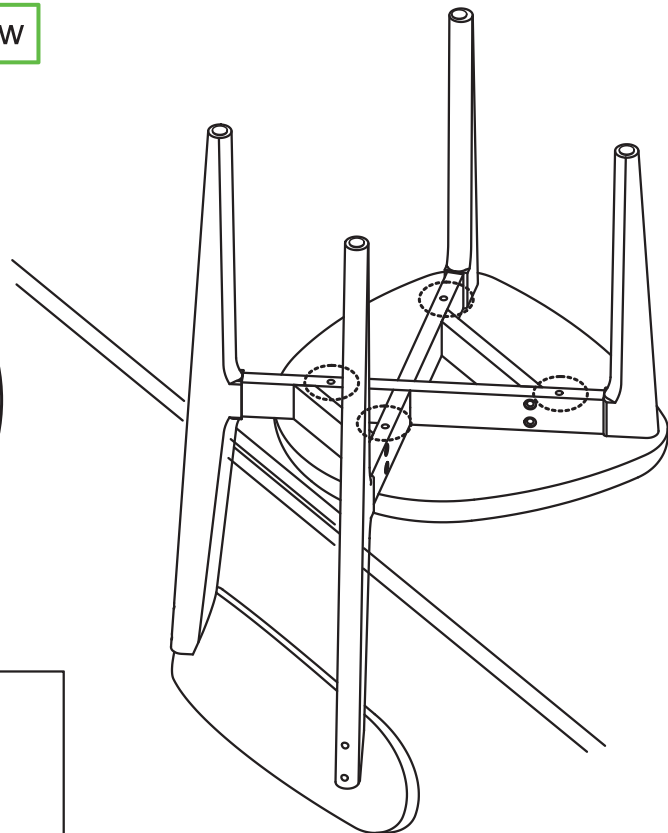
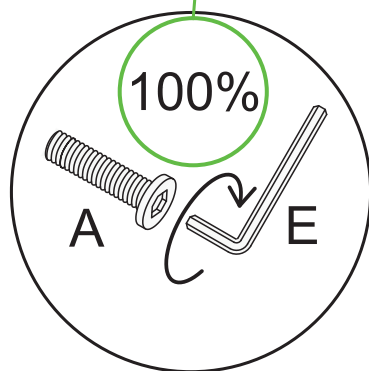


EX1



7.


Fully tighten now

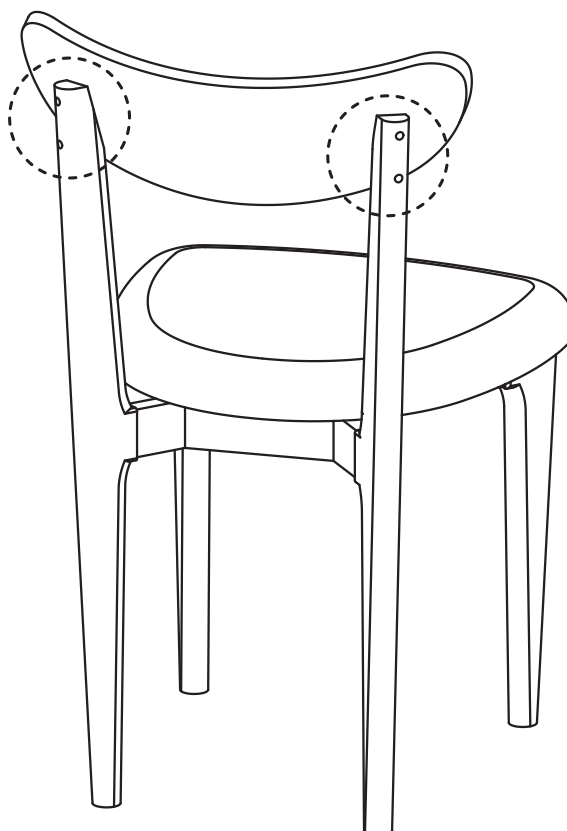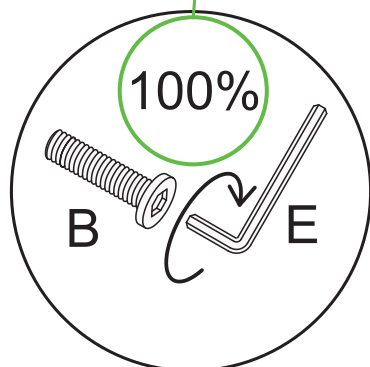

EX1



8.

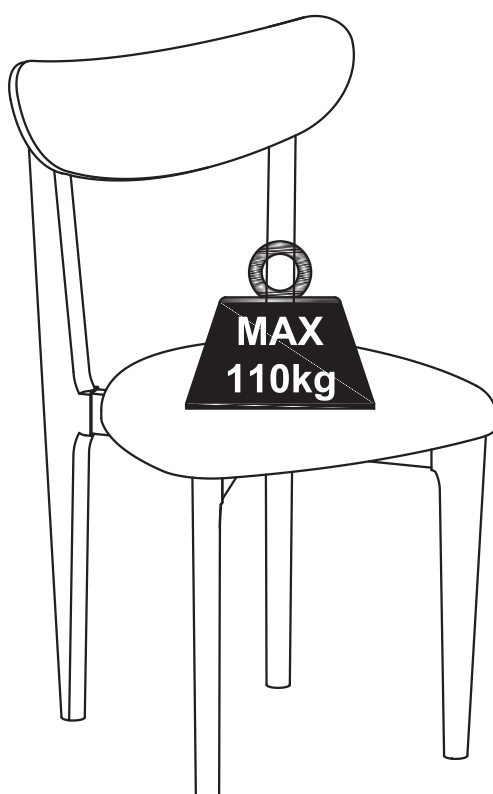

Assembly Completed

