


GRAIN & FRAME


Solid Oak Barstool 02 With Upholstered Seat Pad

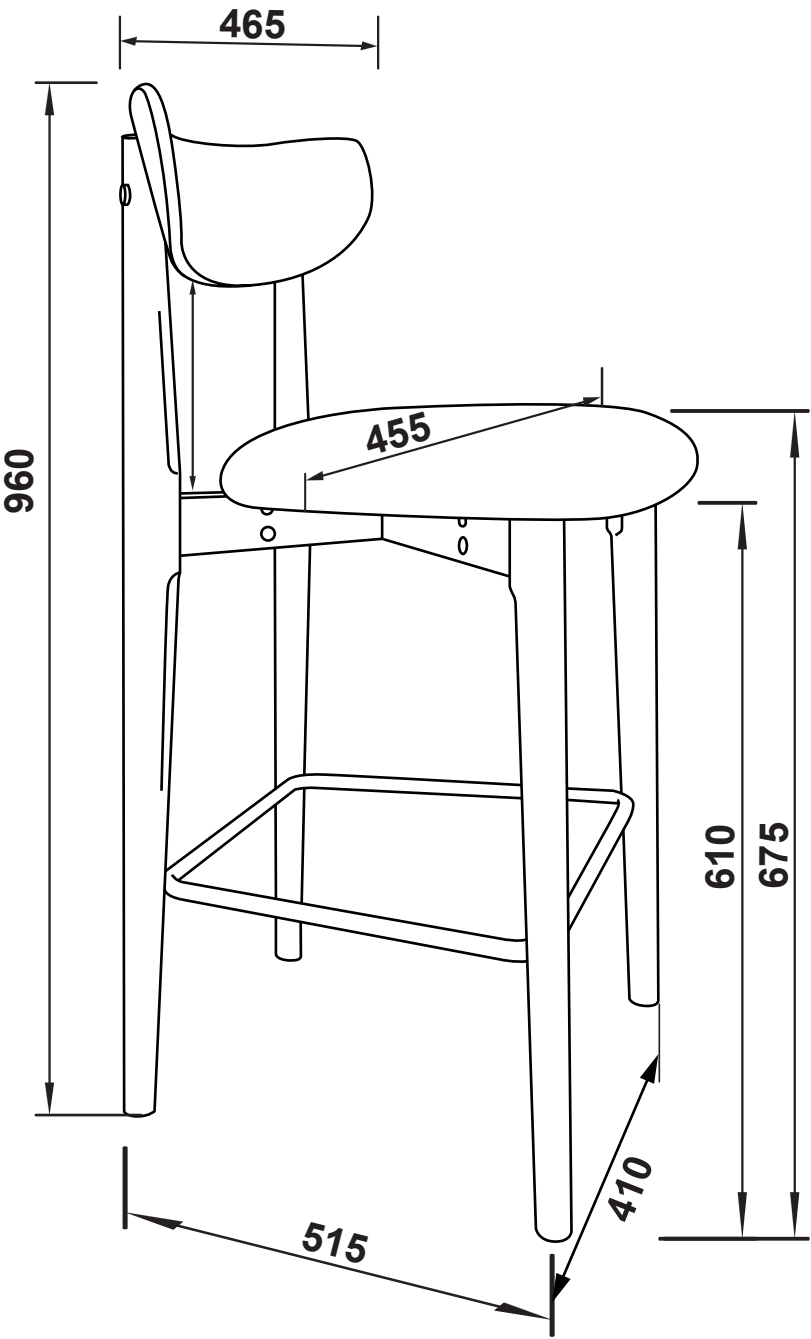

IMPORTANT:

Put all screws into place before tightening each one gradually in sequence.



You will need:

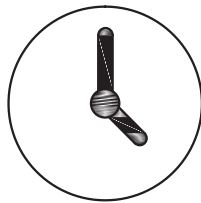

Around 30 minutes




1 person

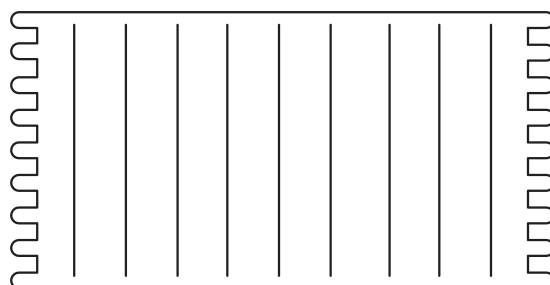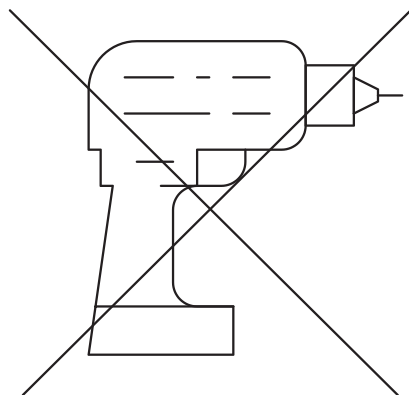


Place your product on a soft surface when assembling



Fittings and parts checklist

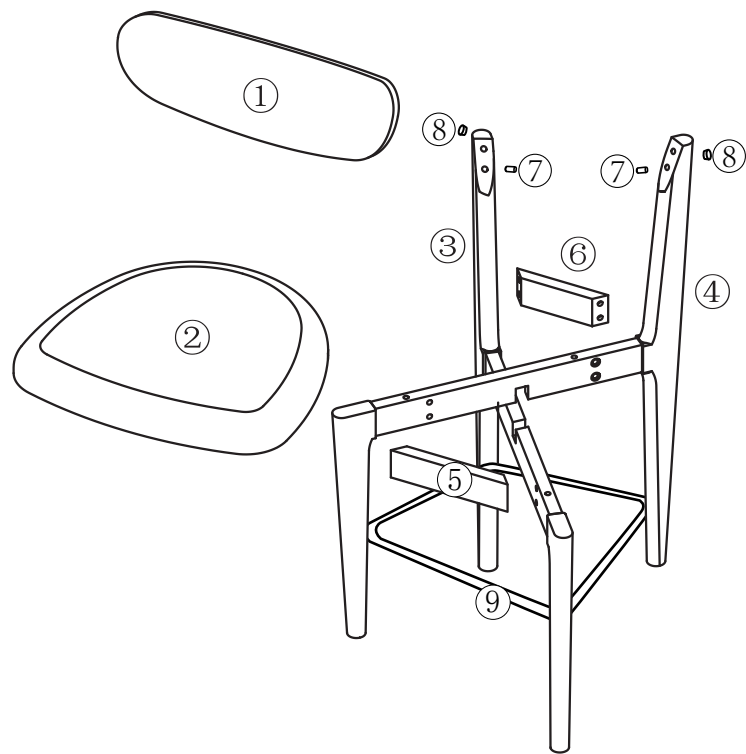

No	Qty	mm
1	1	465x150x15
2	1	455x435x65
3	1	590x28x925
4	1	590x28x925
5	1	245x55x20
6	1	180x55x20
7	2	10x10x20
8	2	19x17x10
9	1	405x400x19

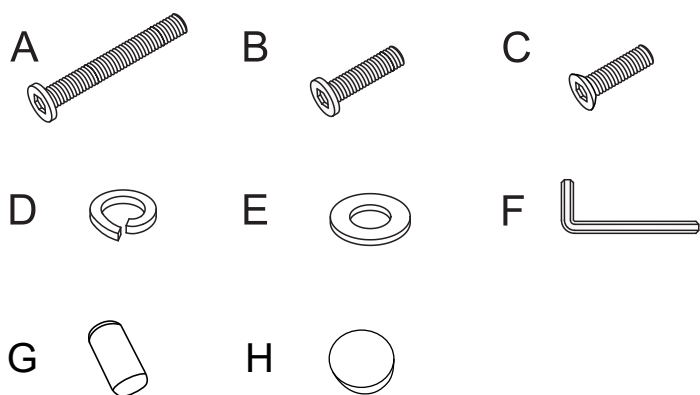


No	Qty	mm
A	4	M6x55
B	10	M6x25
C	4	M6x20
D	14	Ø6xØ10
E	14	Ø6xØ13
F	1	M6
G	2	10x10x20
H	2	19x17x10

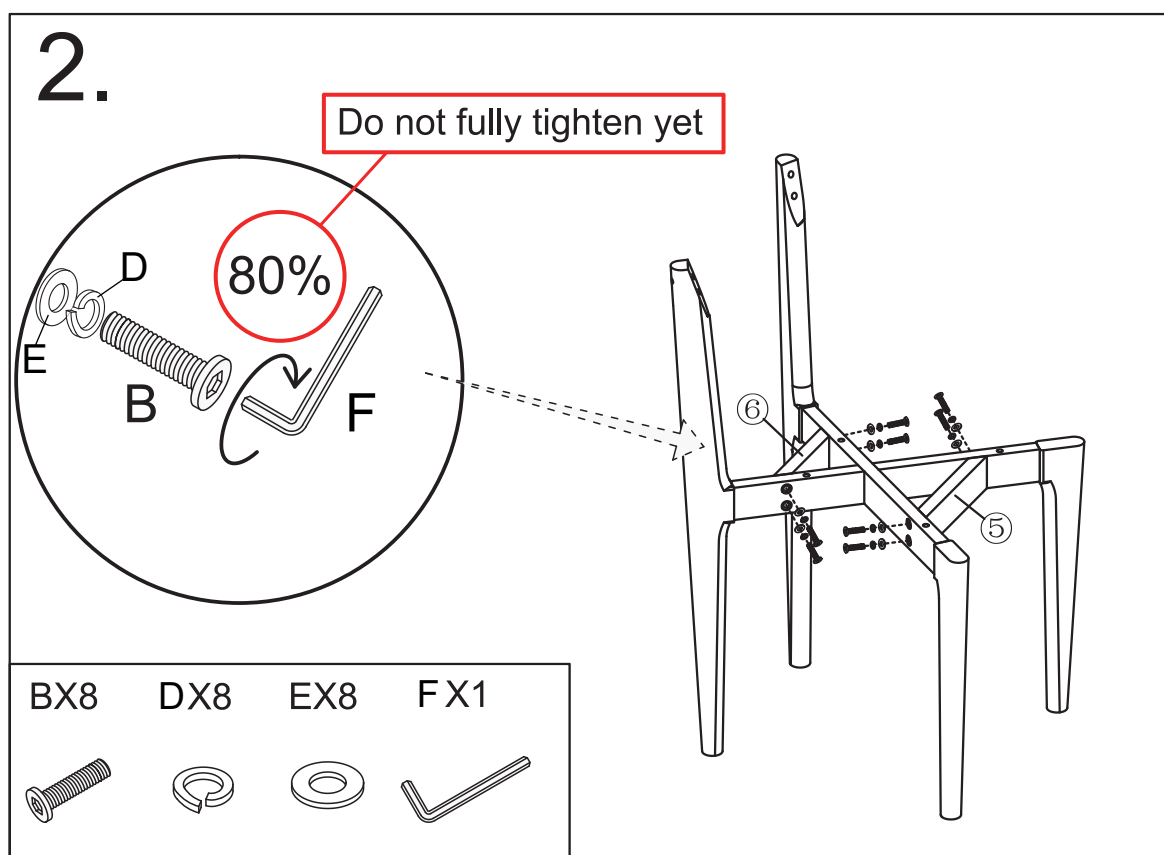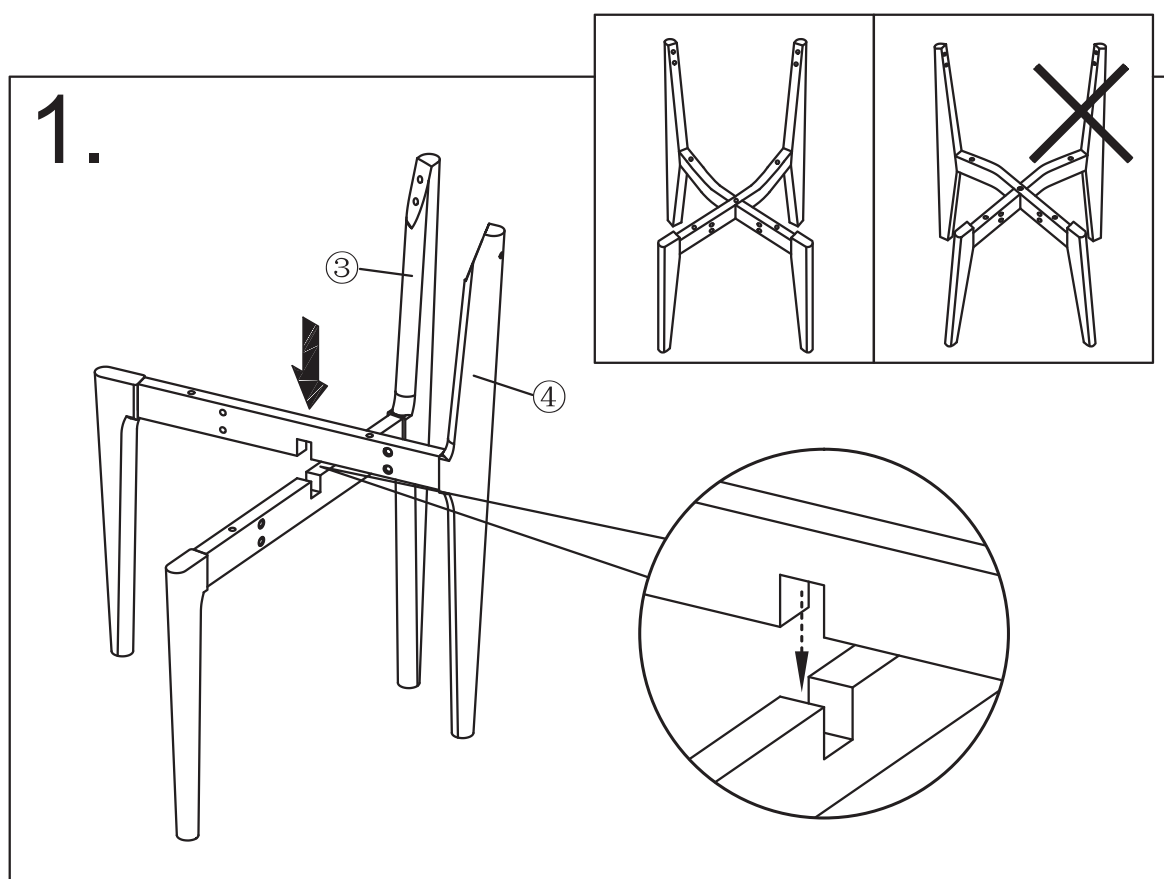

3.

Do not fully tighten yet

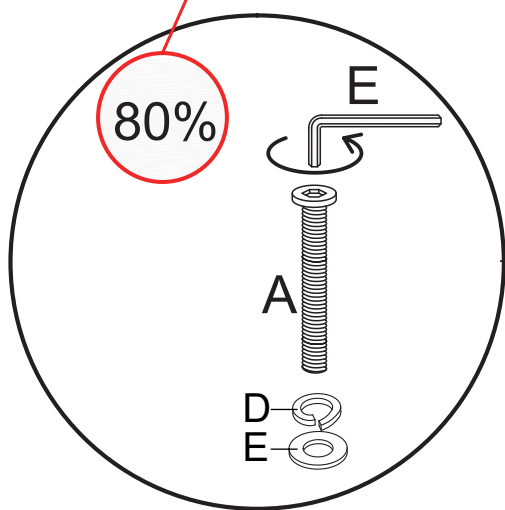


AX4

DX4


EX4

FX1



4.

Do not fully tighten yet

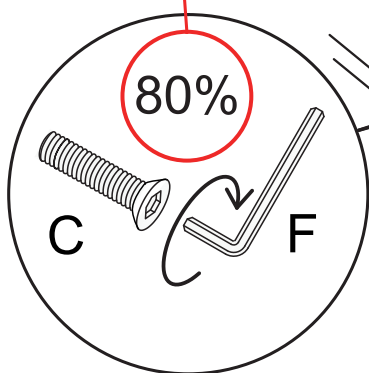


CX4

FX1



5.

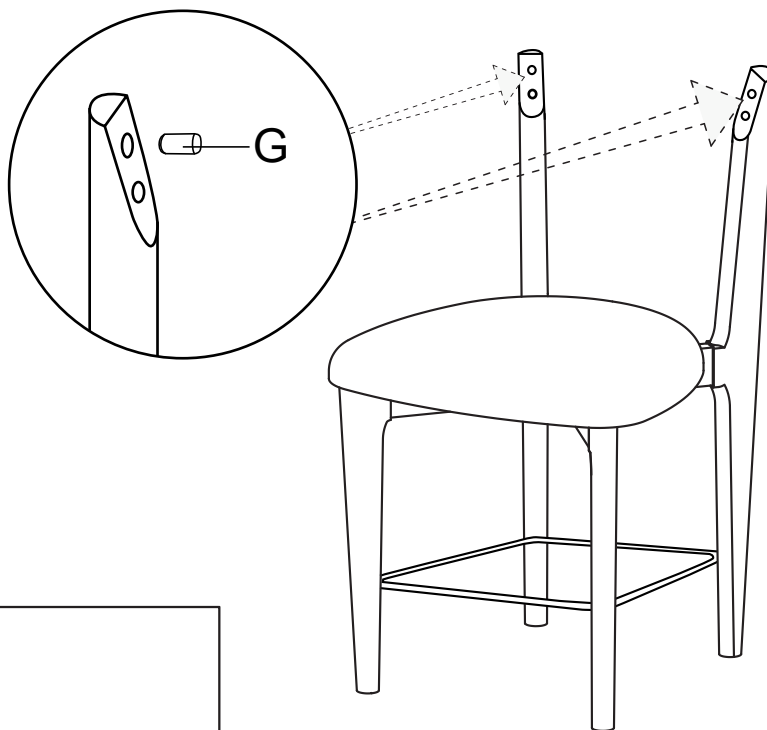


Gx2



6.

Do not fully tighten yet

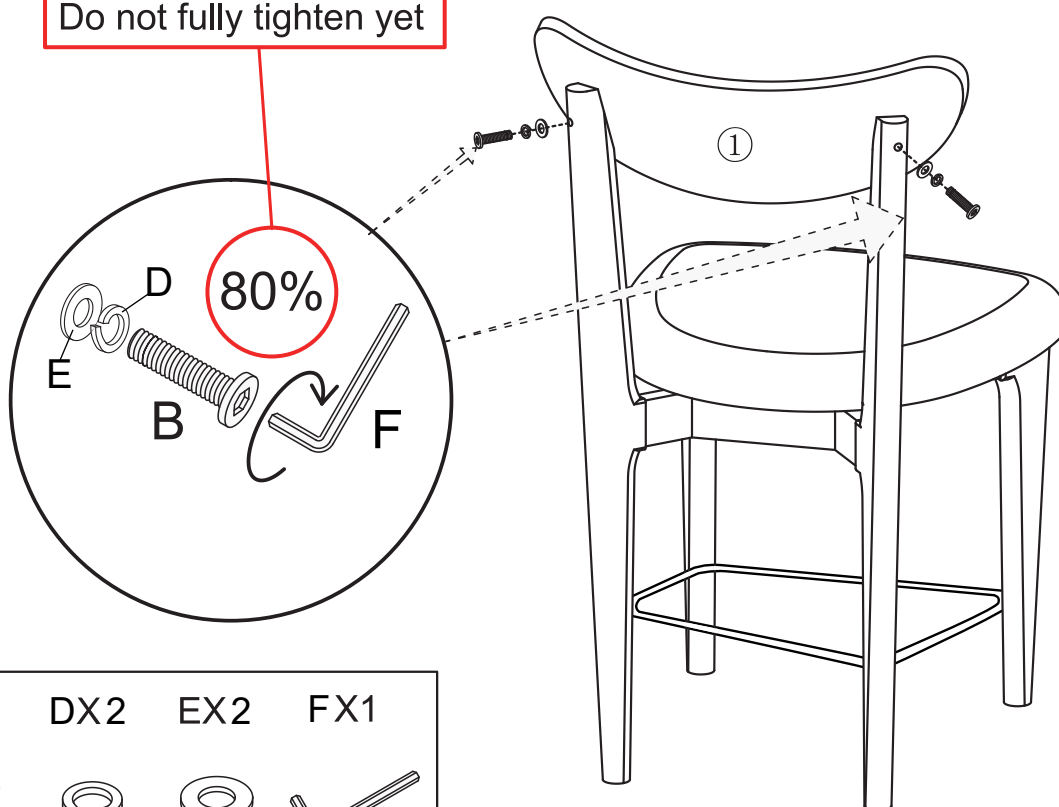

BX2



DX2



EX2




FX1




7.

Fully tighten now

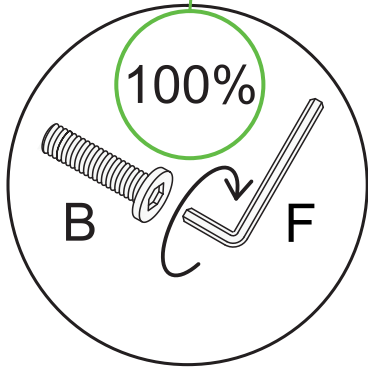


FX1

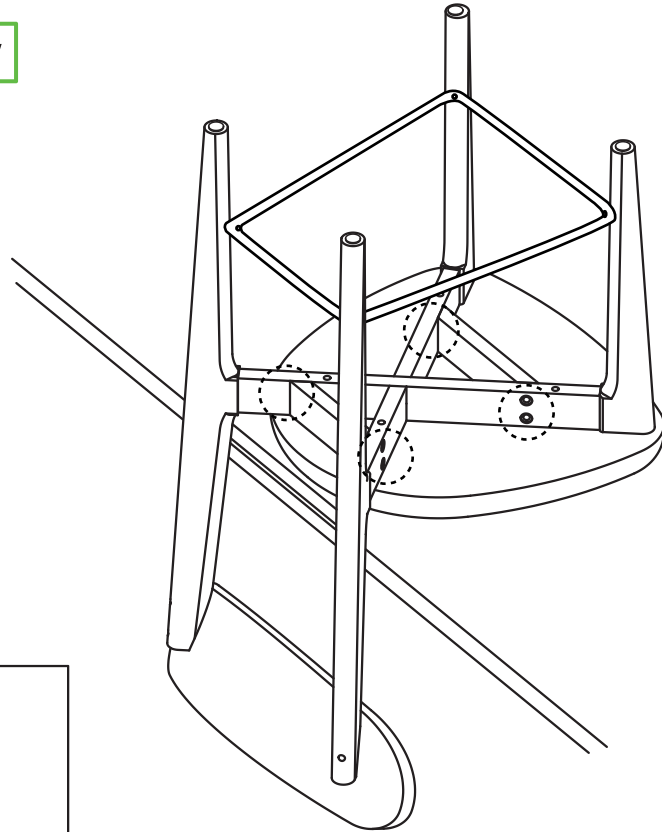


8.

Fully tighten now

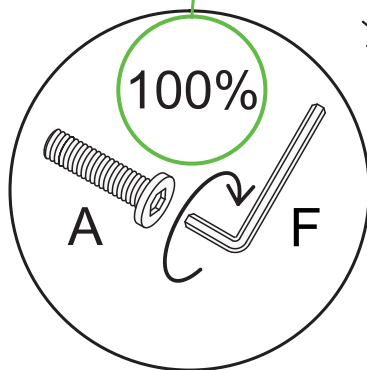


FX1

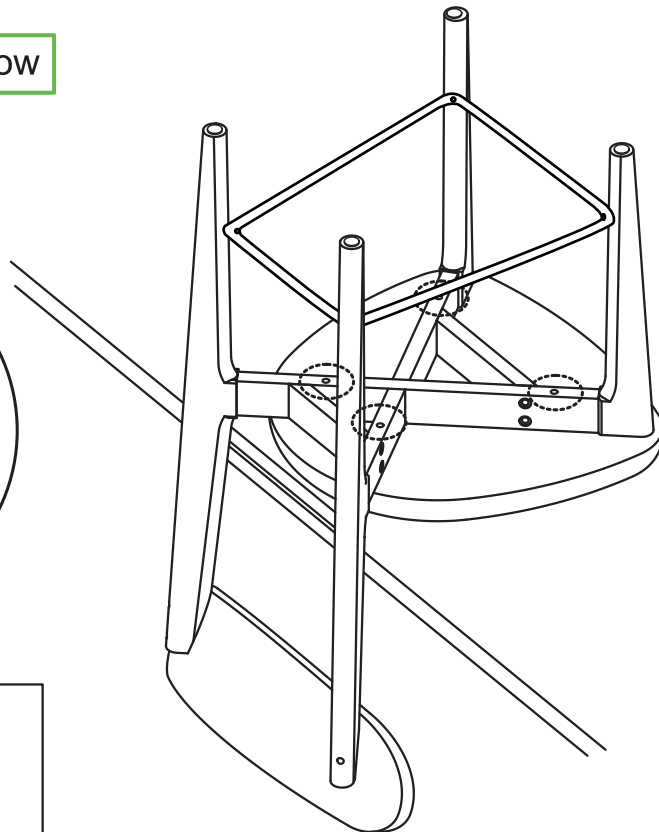


9.

Fully tighten now

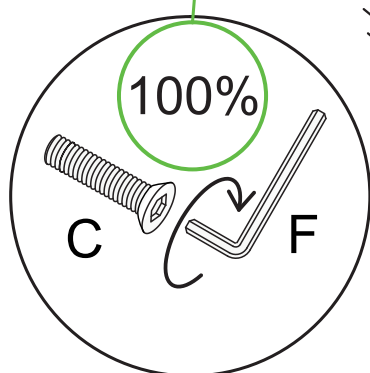


FX1

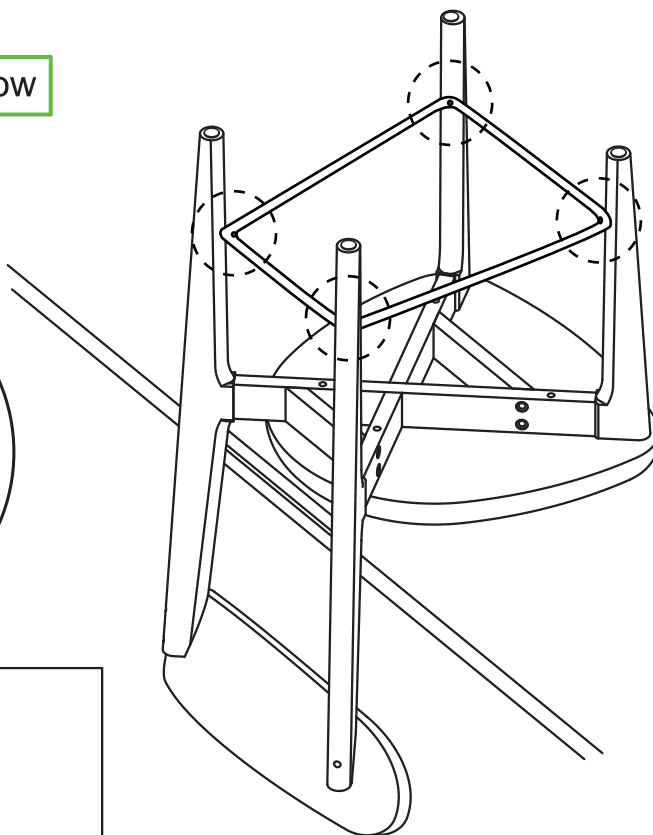


10.


Fully tighten now

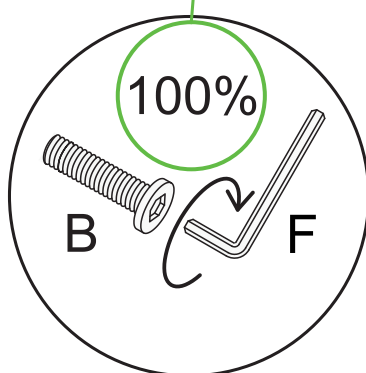


FX1

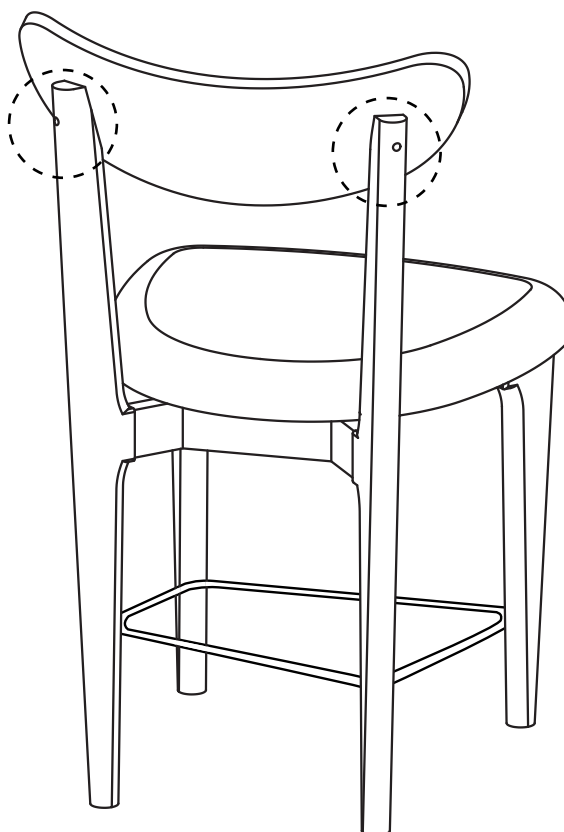

11.

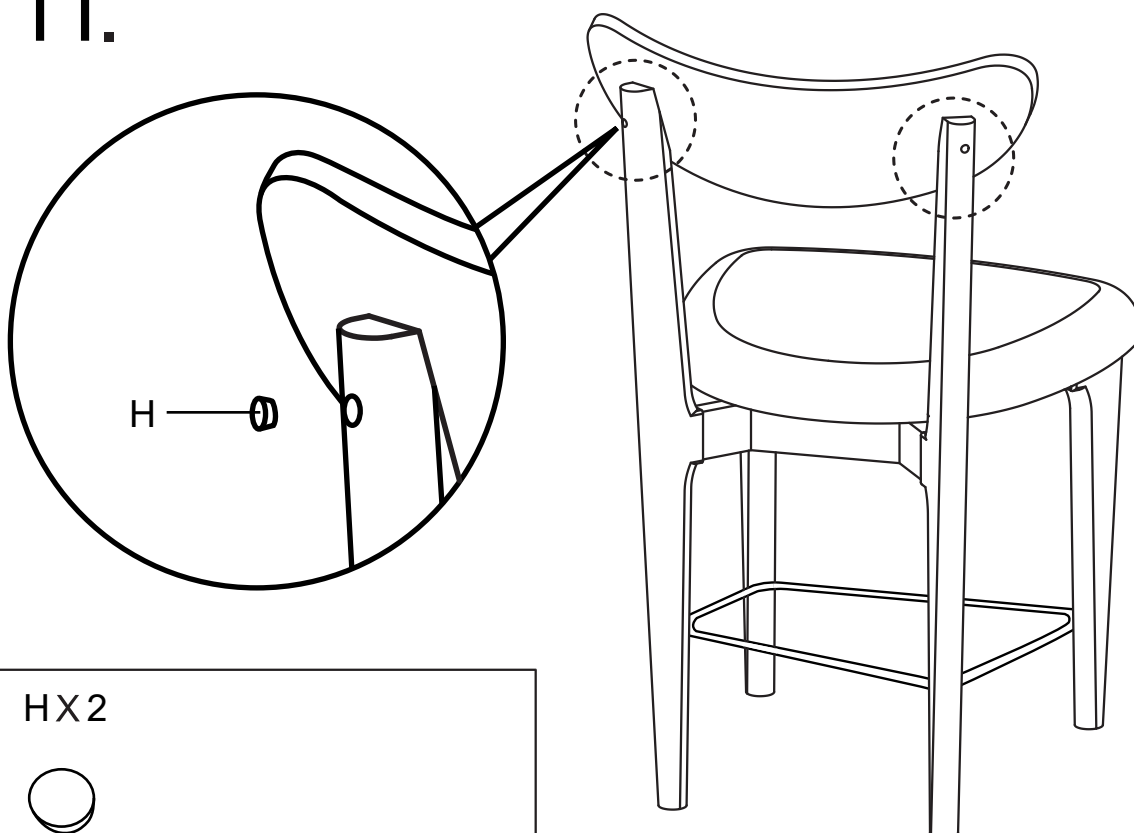

12.

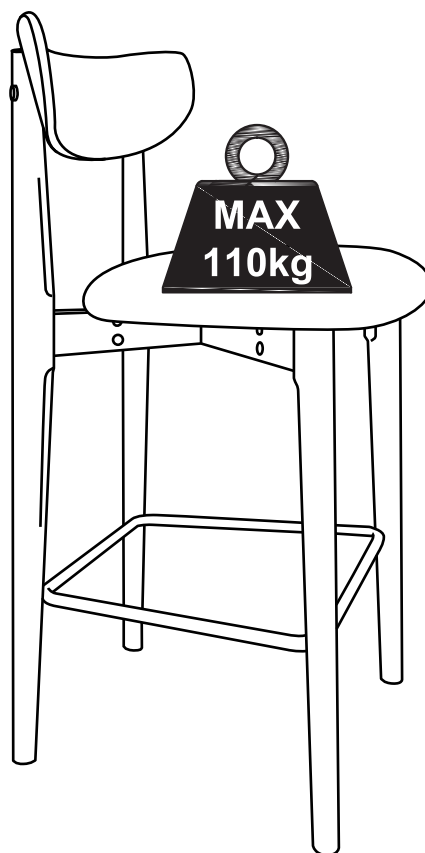

Assembly Completed