


GRAIN & FRAME


Solid Oak Barstool 03 With Upholstered Seat Pad

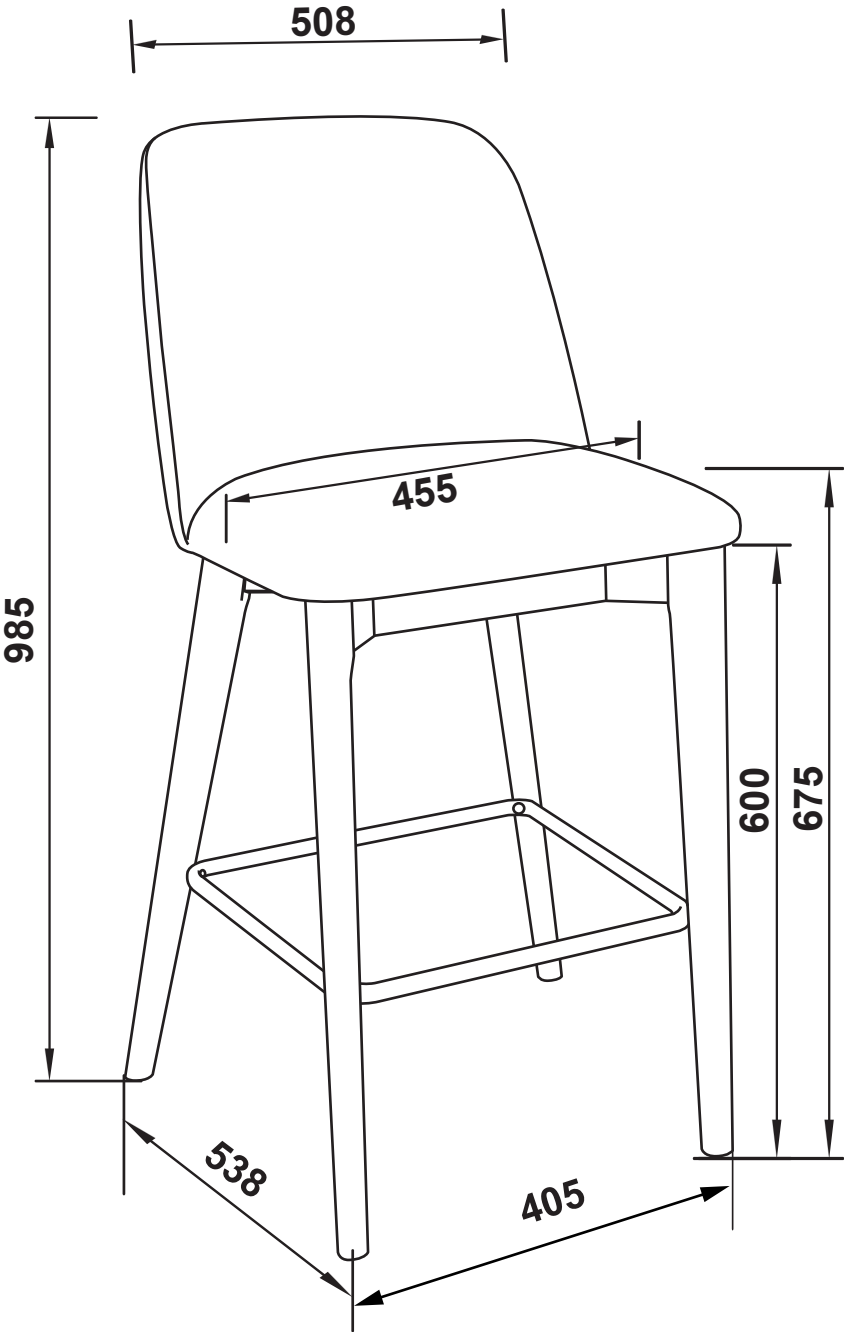


IMPORTANT:

Put all screws into place before tightening each one gradually in sequence.



You will need:

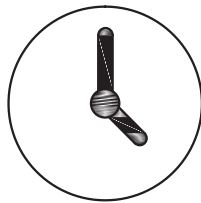

Around 30 minutes

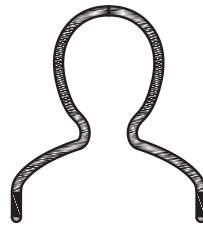


1 person

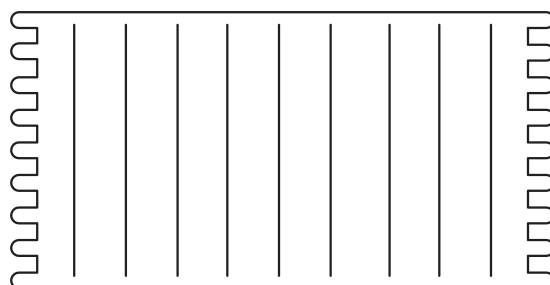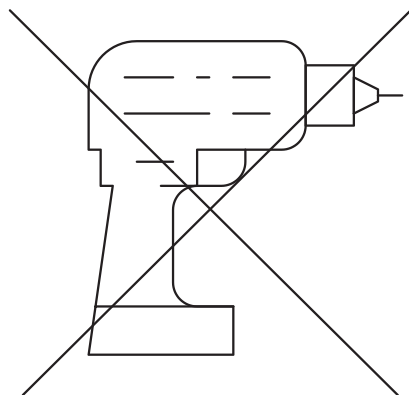


Place your product on a soft surface when assembling



Fittings and parts checklist

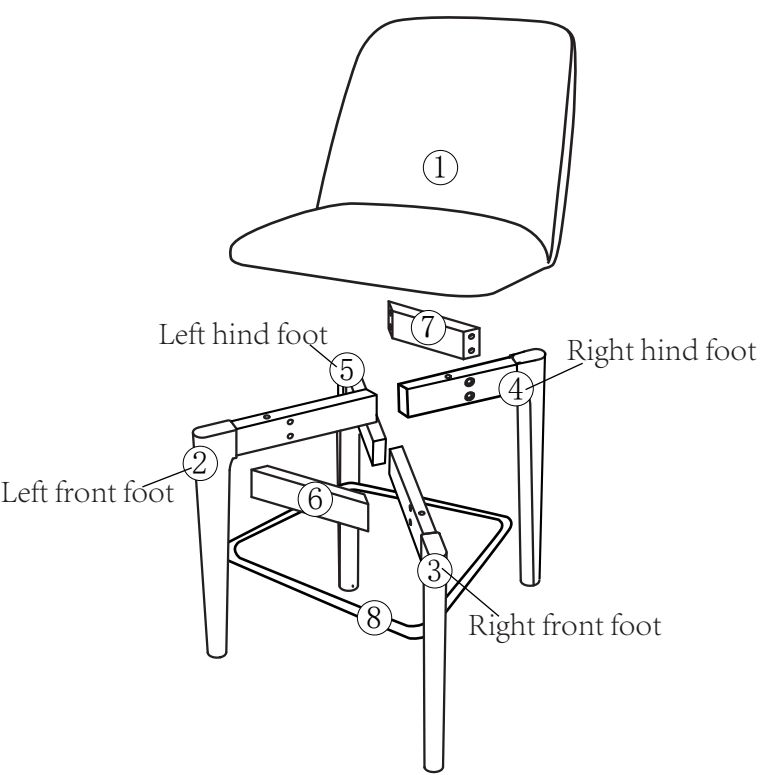

No	Qty	mm
1	1	455x538x385
2	1	271x600x28
3	1	283x600x28
4	1	210x595x28
5	1	225x595x28
6	1	234x55x22
7	1	205x55x22
8	1	405x390x10


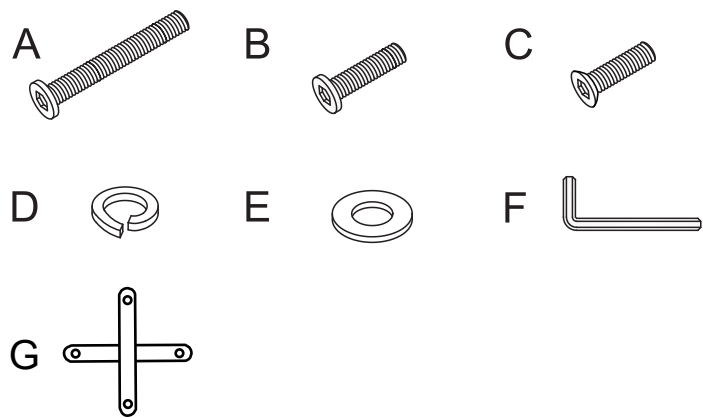


No	Qty	mm
A	4	M6x55
B	12	M6x25
C	4	M6x20
D	16	Ø6xØ10
E	16	Ø6xØ13
F	1	M6
G	1	150*150

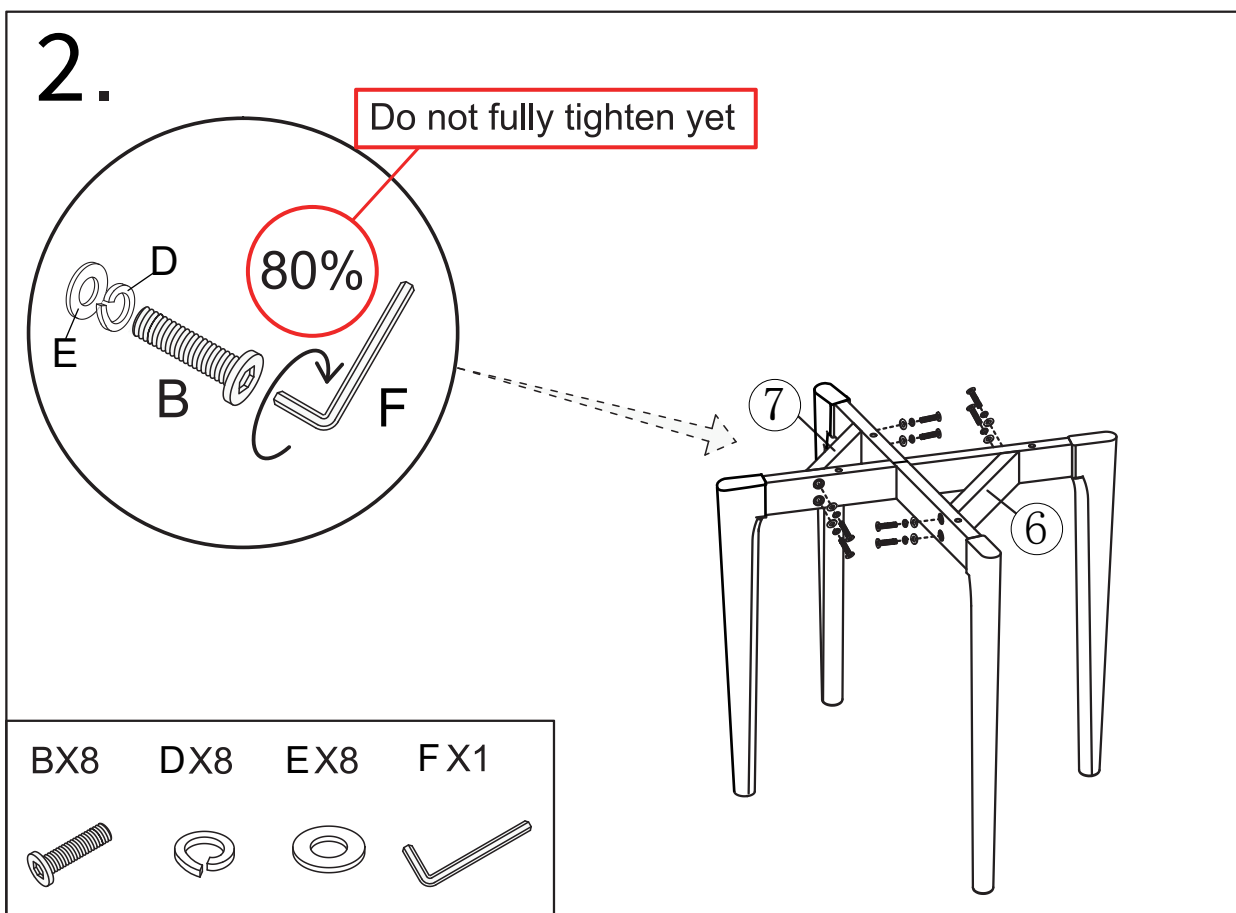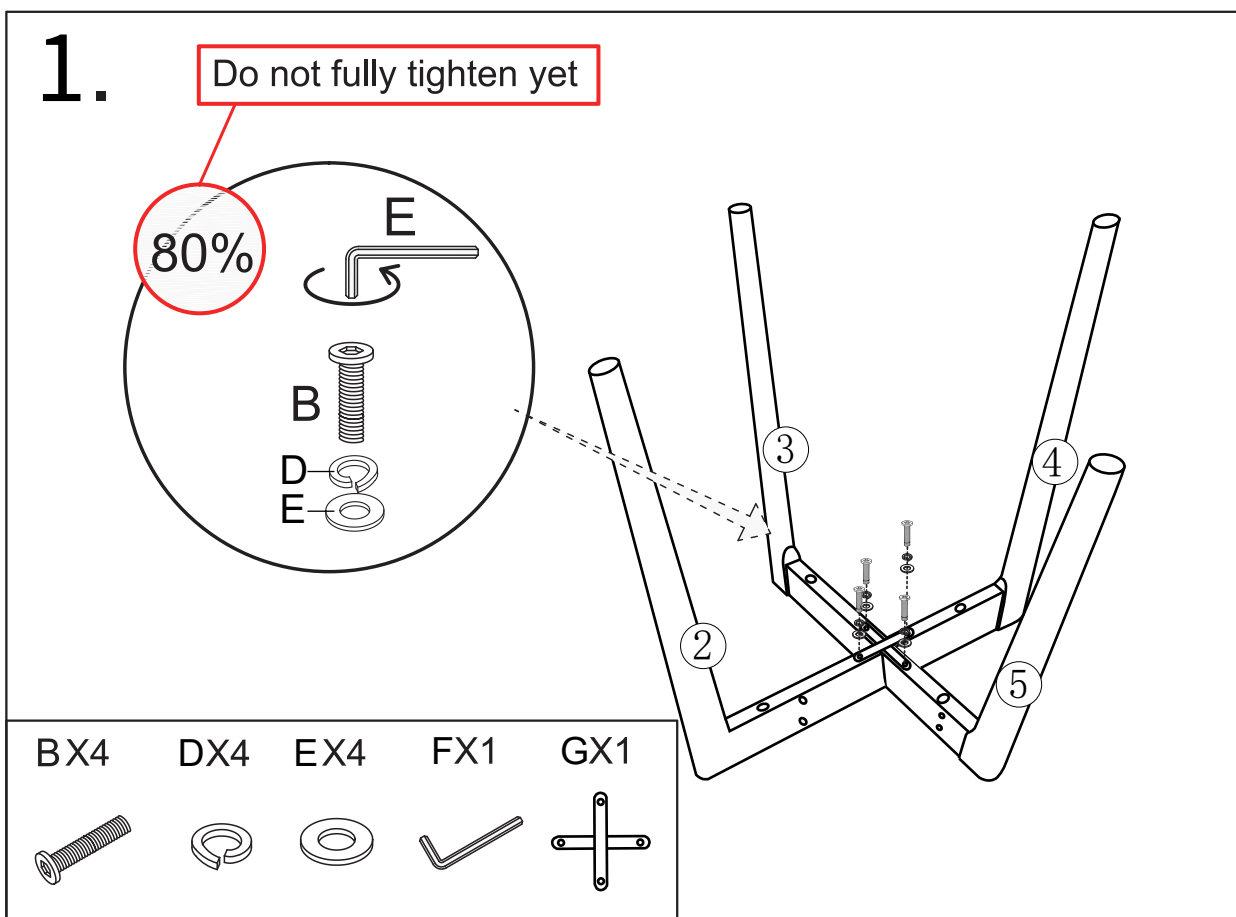

3.

Do not fully tighten yet

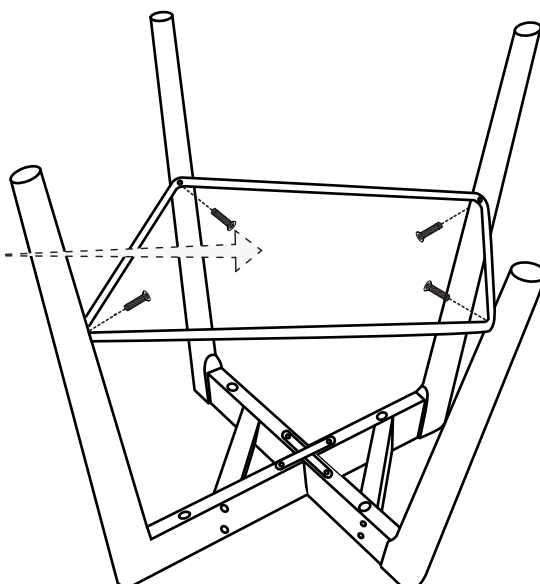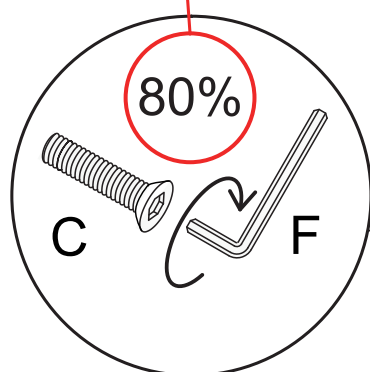



CX4

FX1



4.

Do not fully tighten yet

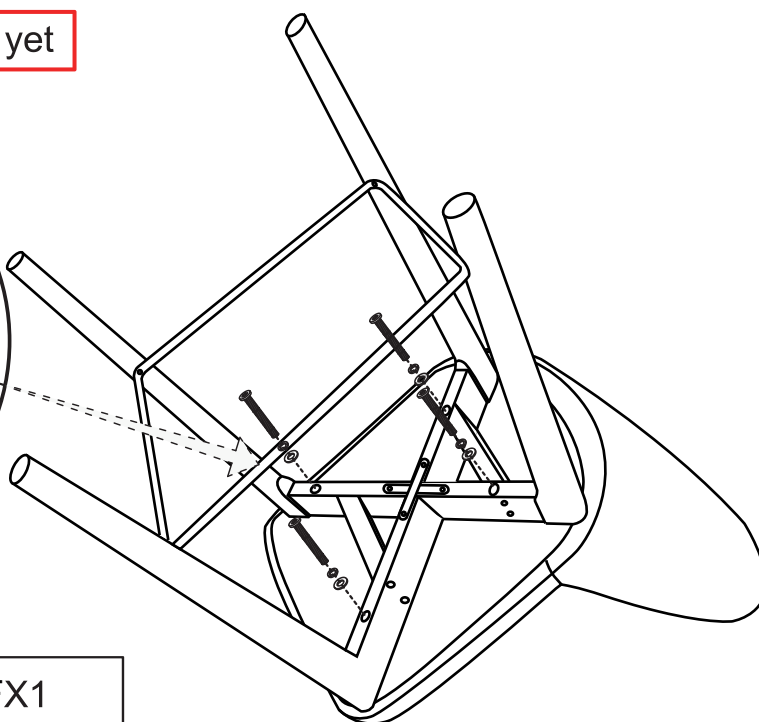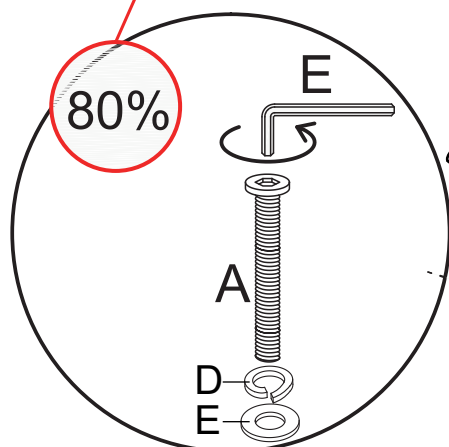


AX4

DX4



EX4

FX1



5.

Fully tighten now

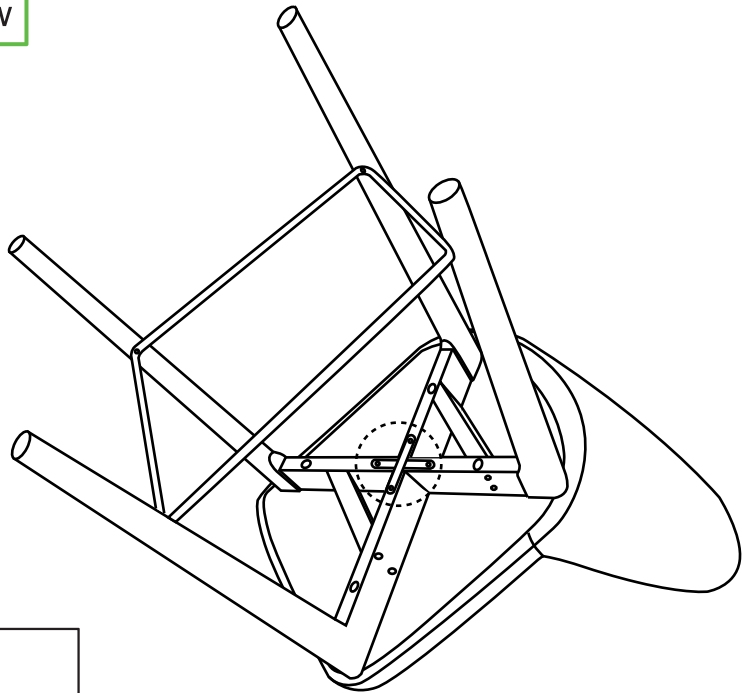
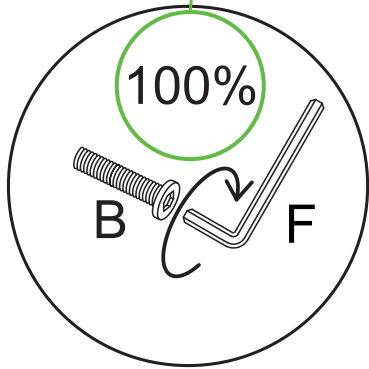


FX1



6.

Fully tighten now

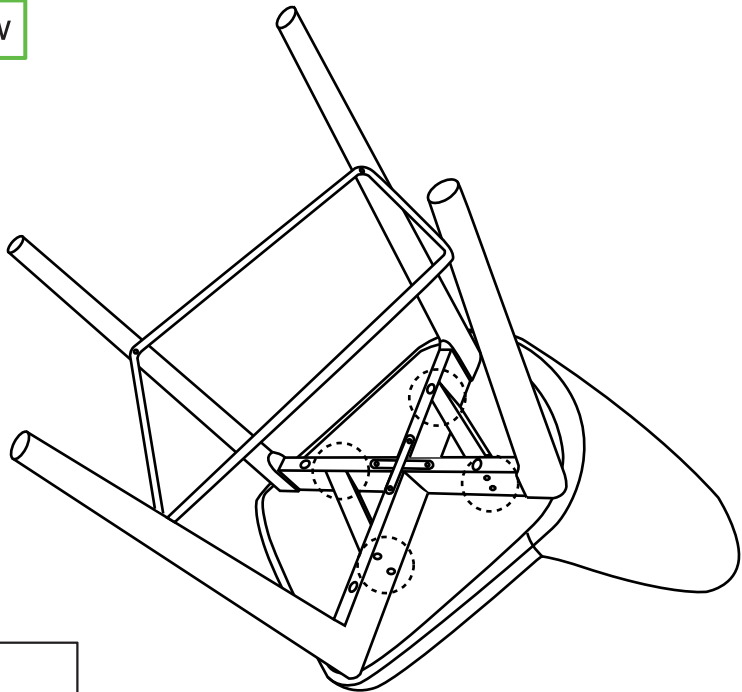
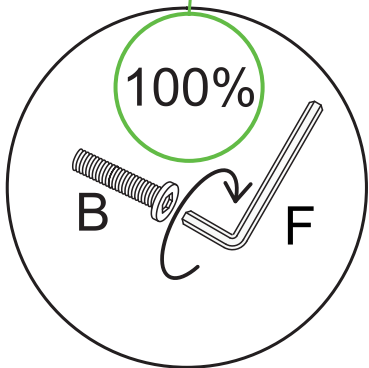


FX1



7.

Fully tighten now

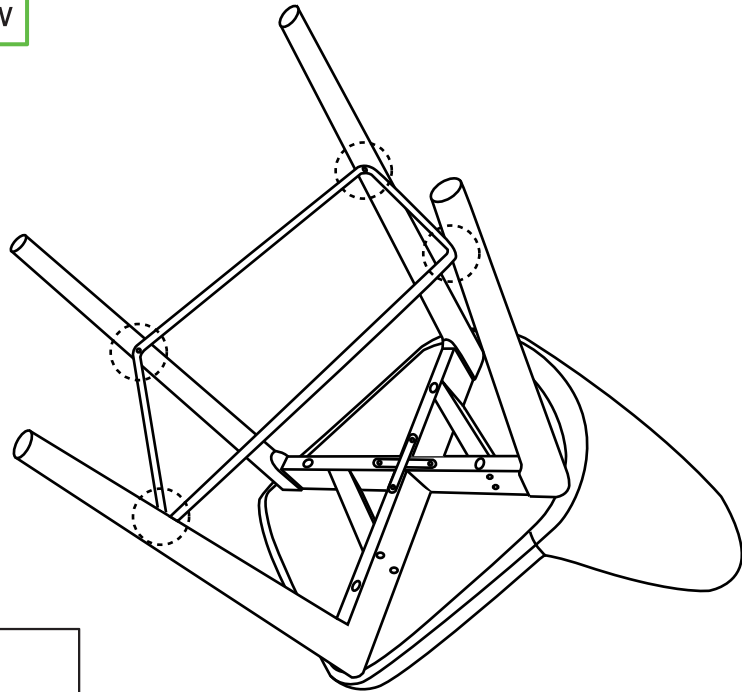
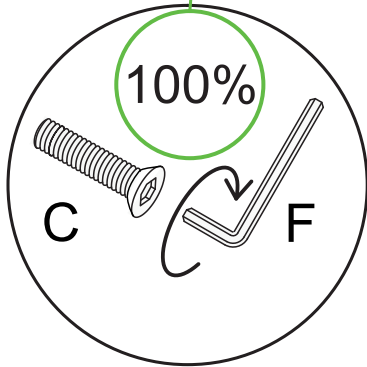


FX1



8.

Fully tighten now

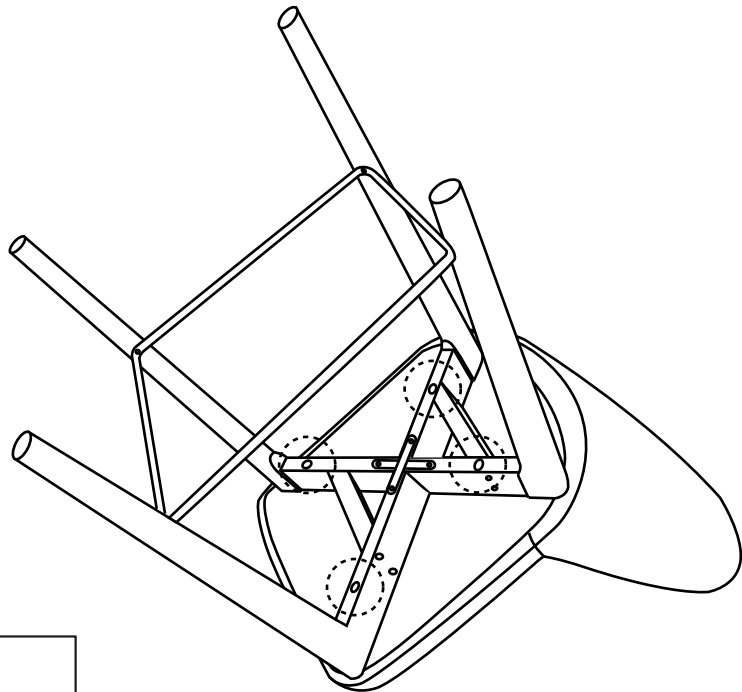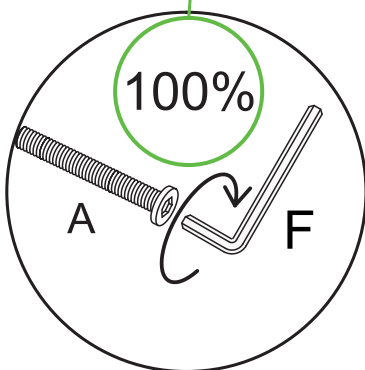

FX1



9.



Assembly Completed