


GRAIN & FRAME


Solid Oak Dining Chair 03 With Upholstered Seat Pad

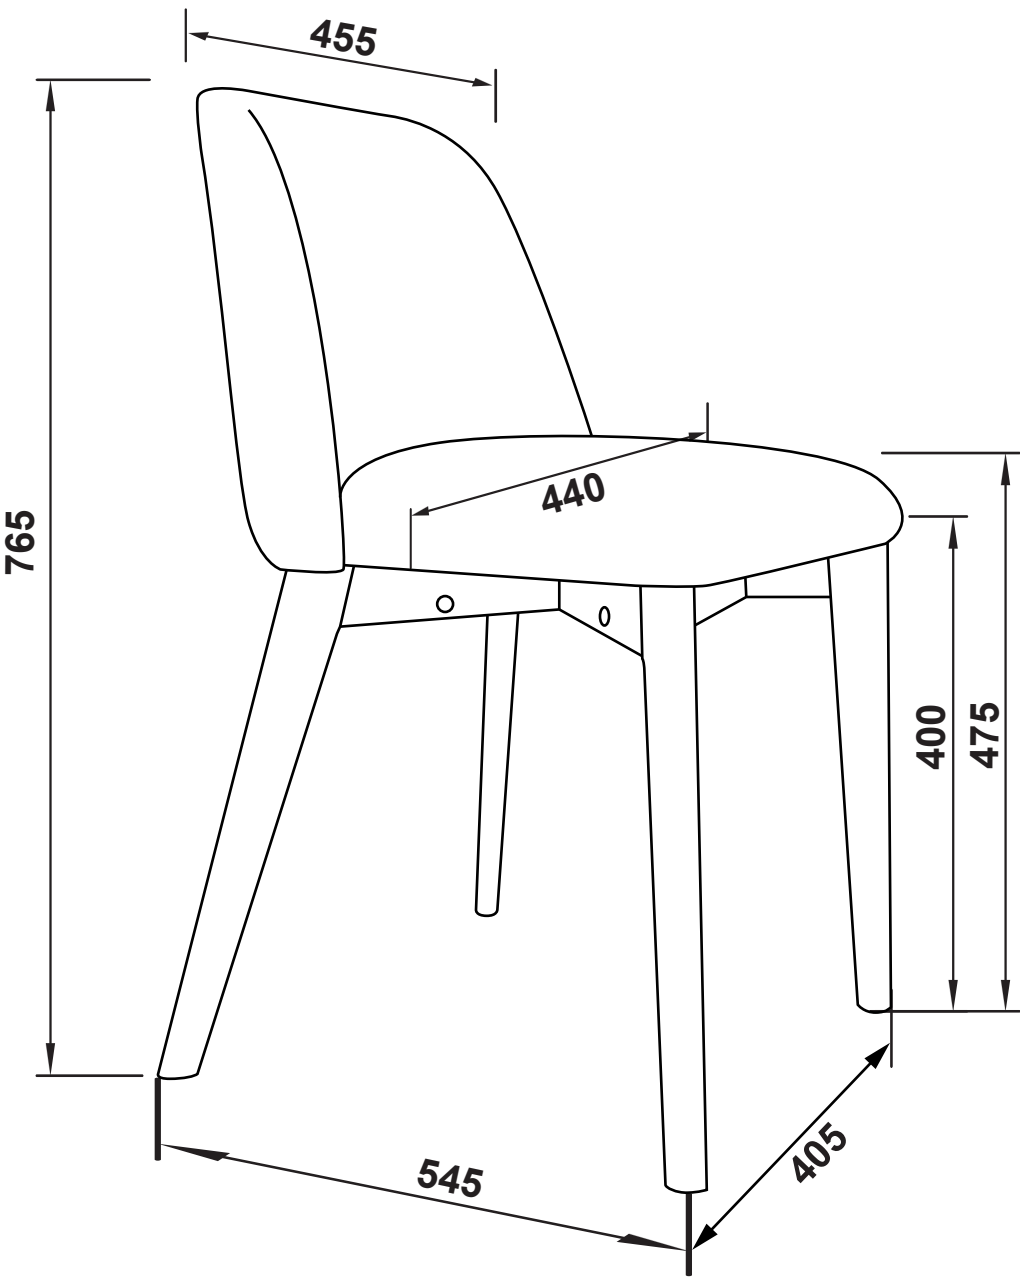


IMPORTANT:

Put all screws into place before tightening each one gradually in sequence.



You will need:

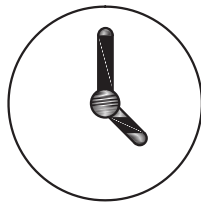

Around 30 minutes

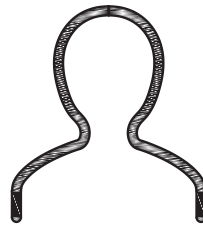


1 person

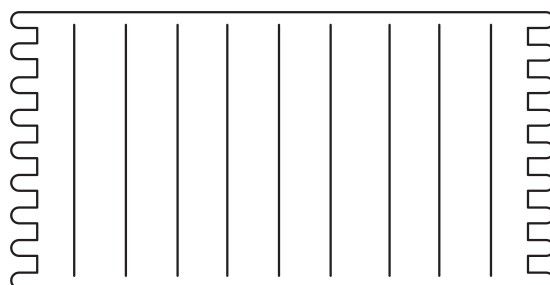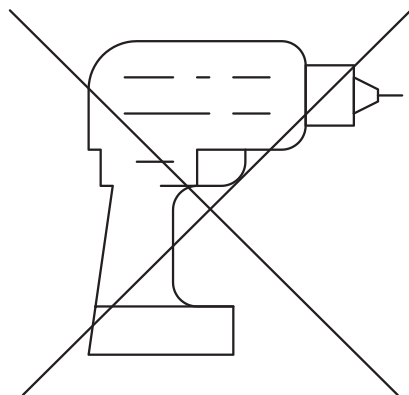


Place your product on a soft surface when assembling



Fittings and parts checklist

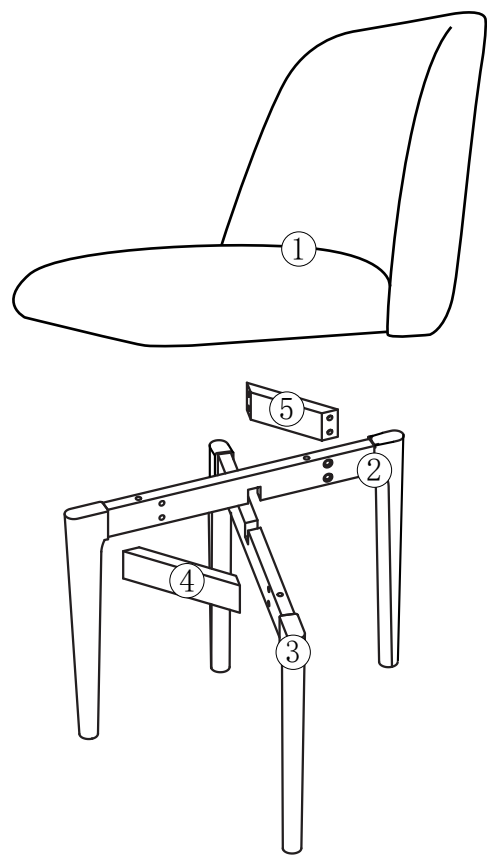

No	Qty	mm
1	1	440x540x385
2	1	614x400x22
3	1	614x400x22
4	1	216x55x22
5	1	163x55x22


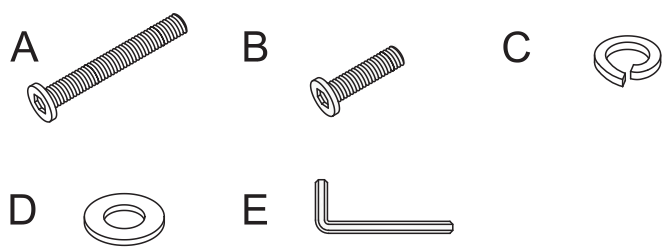


No	Qty	mm
A	4	M6x55
B	8	M6x25
C	12	Ø6xØ10
D	12	Ø6xØ13
E	1	M6

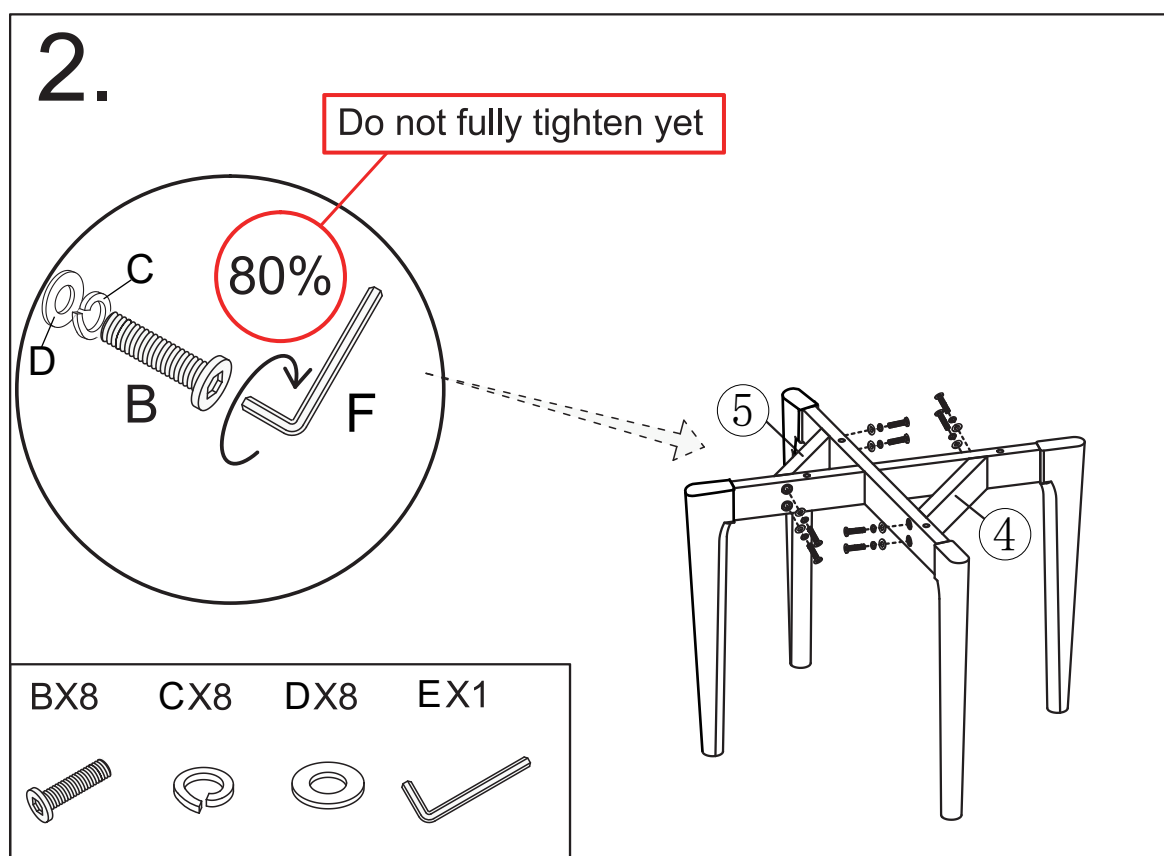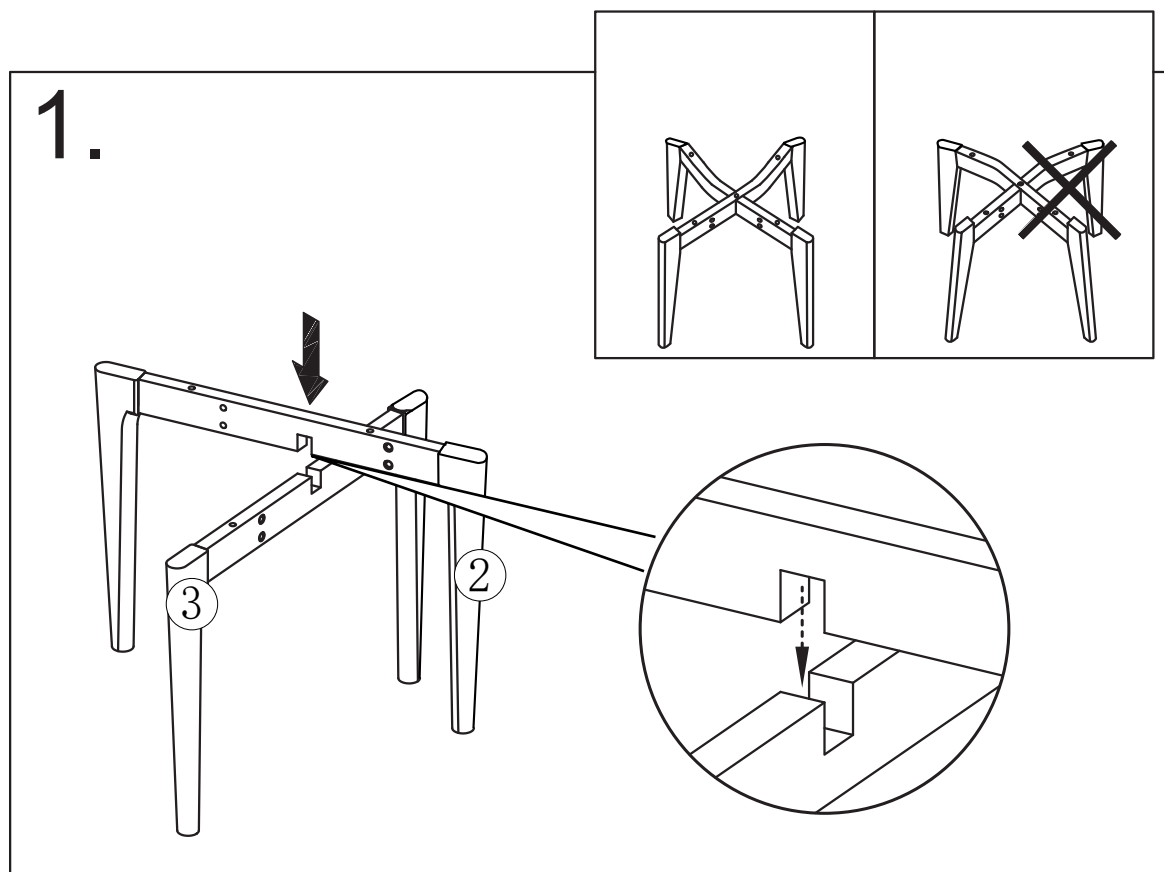

3.

Do not fully tighten yet

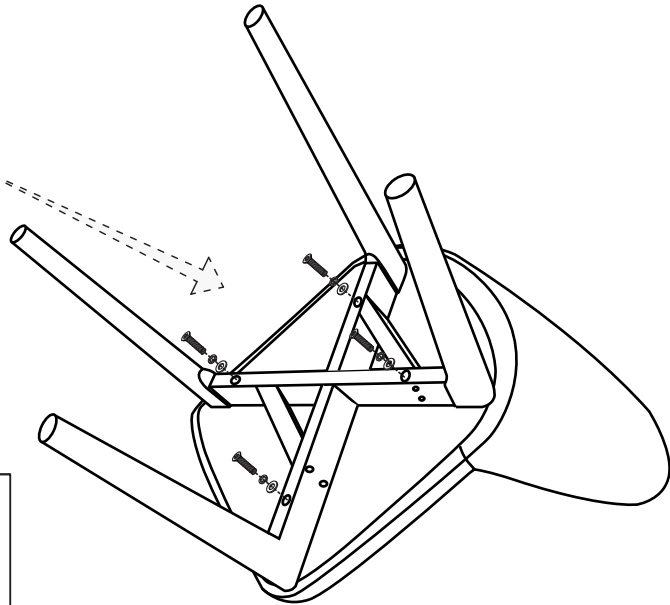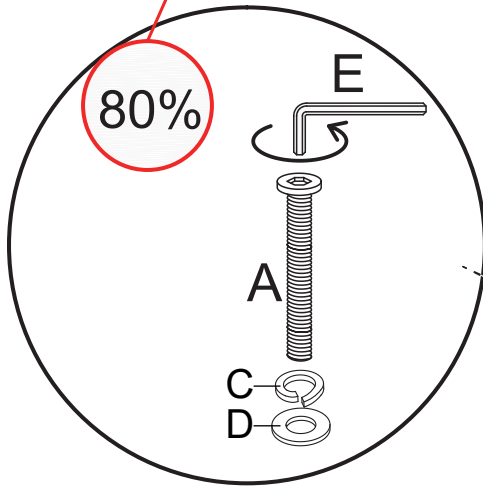


AX4

CX4



DX4

EX1



4.

Fully tighten now

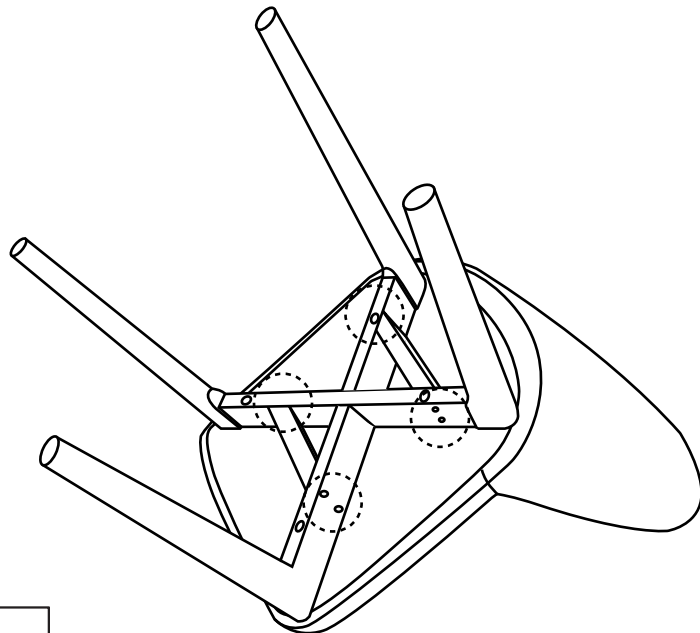
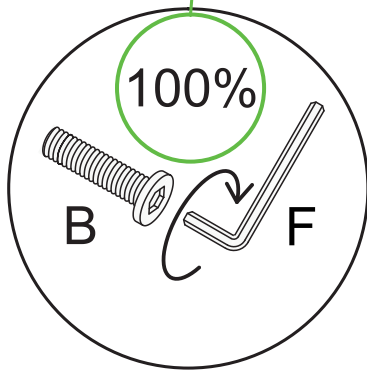


FX1



5.


Fully tighten now

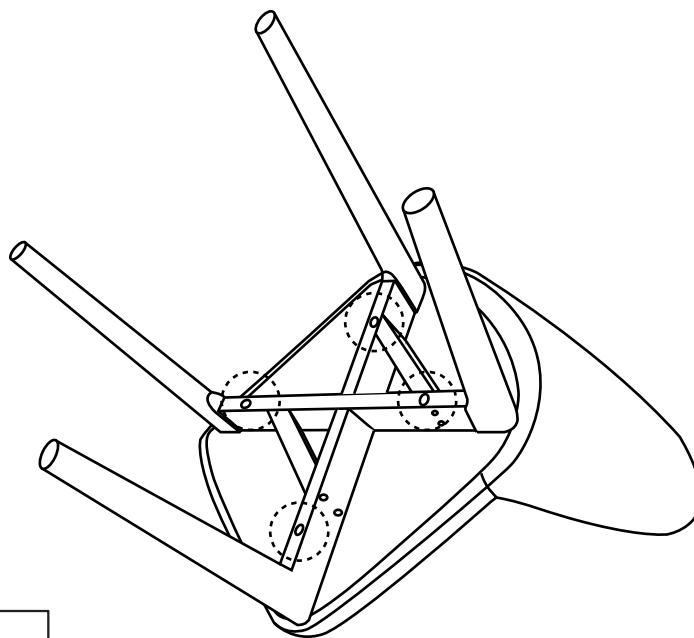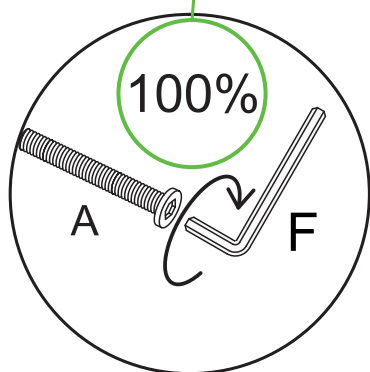

FX1



6.

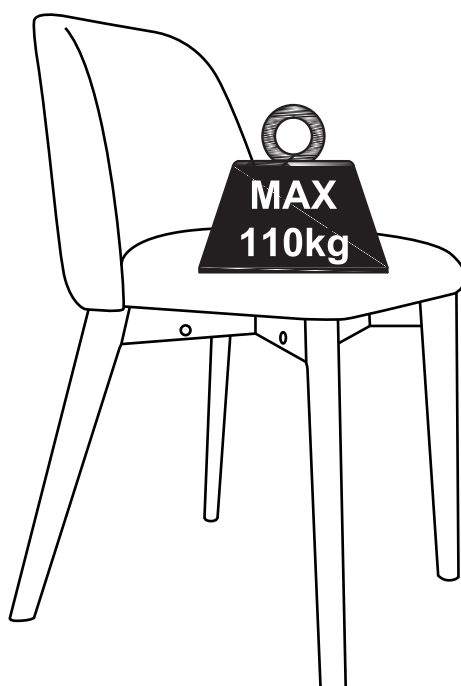

Assembly Completed