

GRAIN & FRAME

Solid Oak Dining Table 02


ASSEMBLY INSTRUCTION






30 minutes



2 people

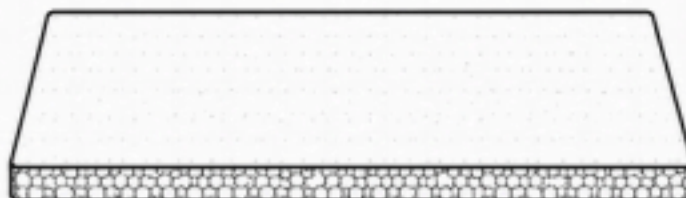


Place table face down on polystyrene provided when assembling

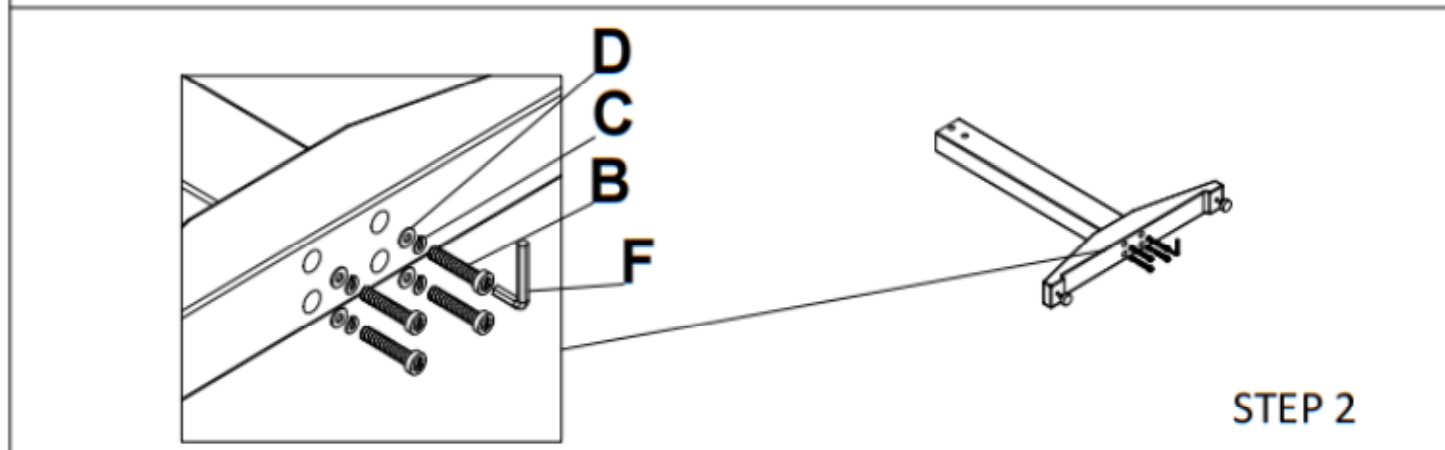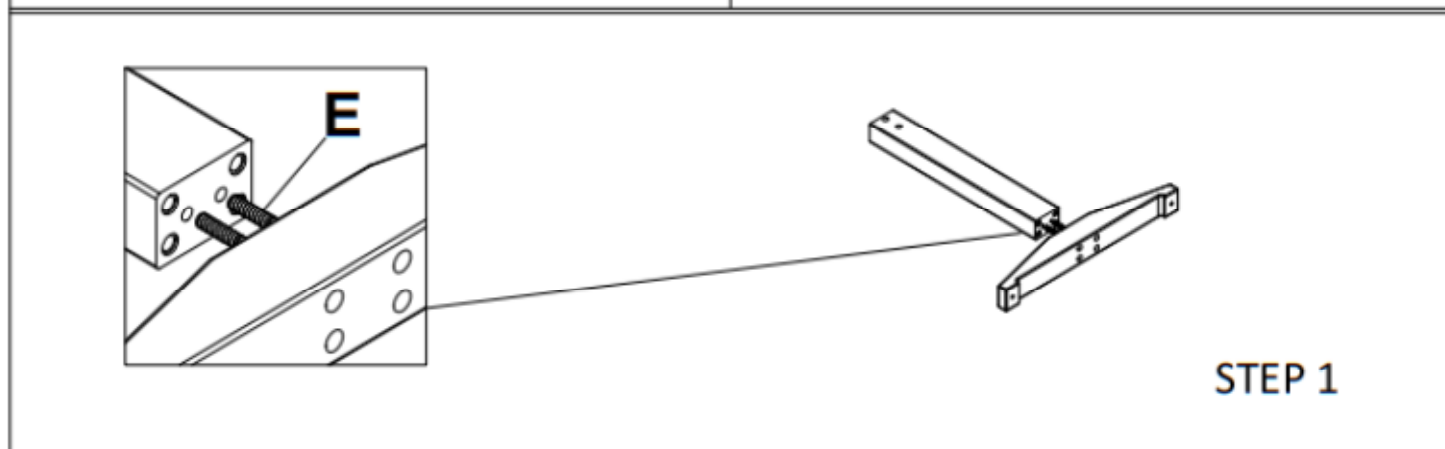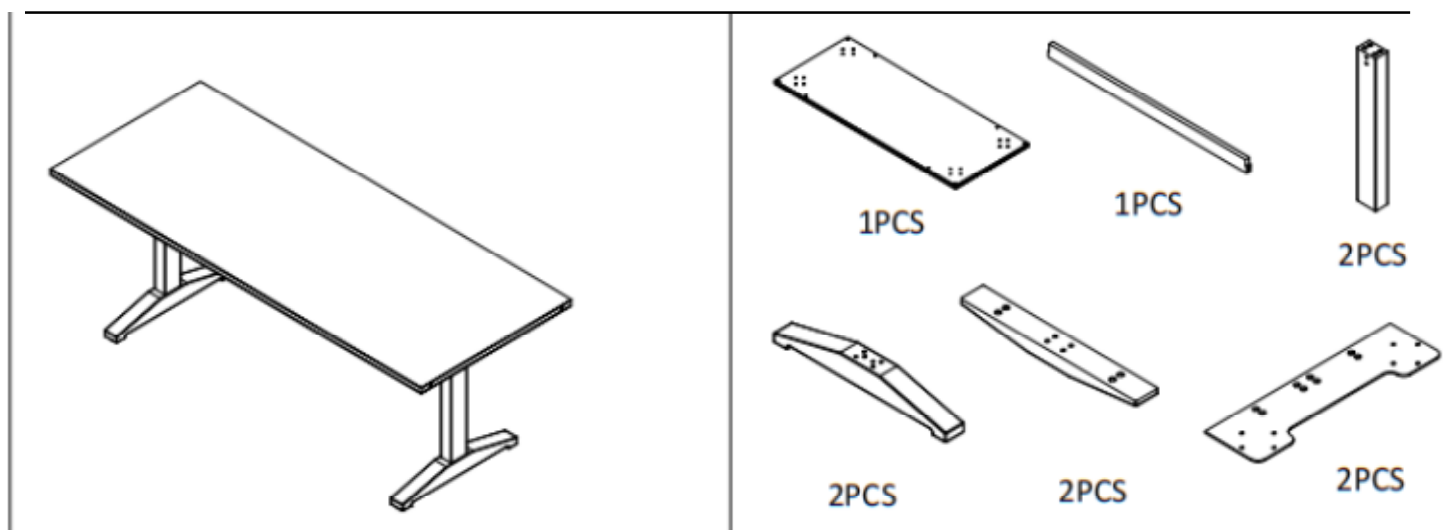


					
A. M8x70mm =8	B. M8x70mm =10	C. M8*13 =11	D. M8 *14 =11	E. M10 *40 =6	F. M5=1
					
G. M4 =1	H. M8*20 =8	J. M16 =4	K. M6x20mm =16	L. M6*13 =17	M. M6*18 =17


STEP 3

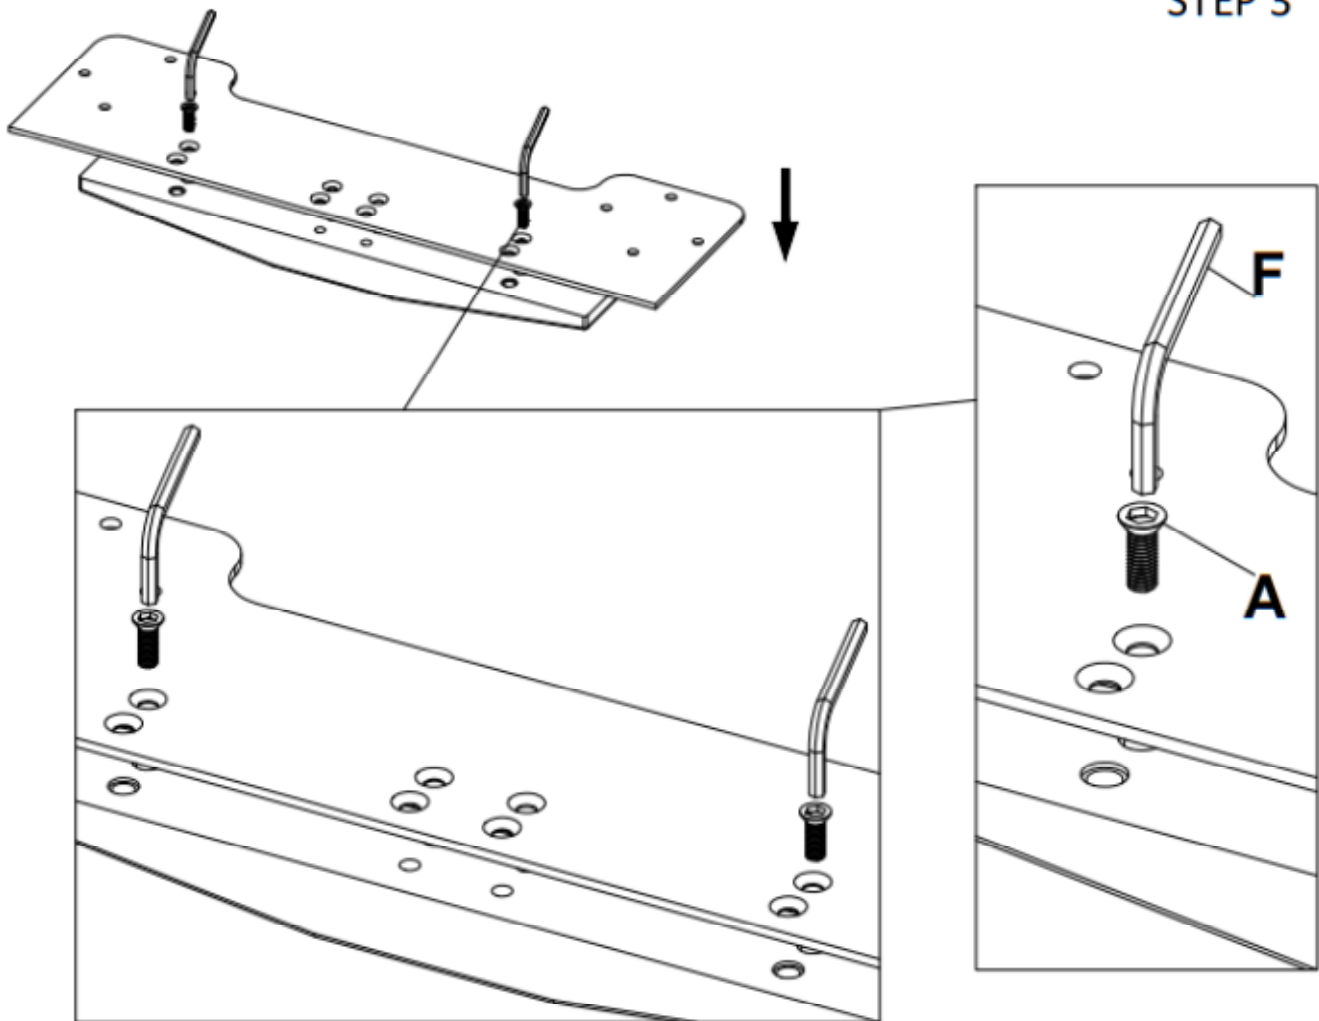


STEP 4

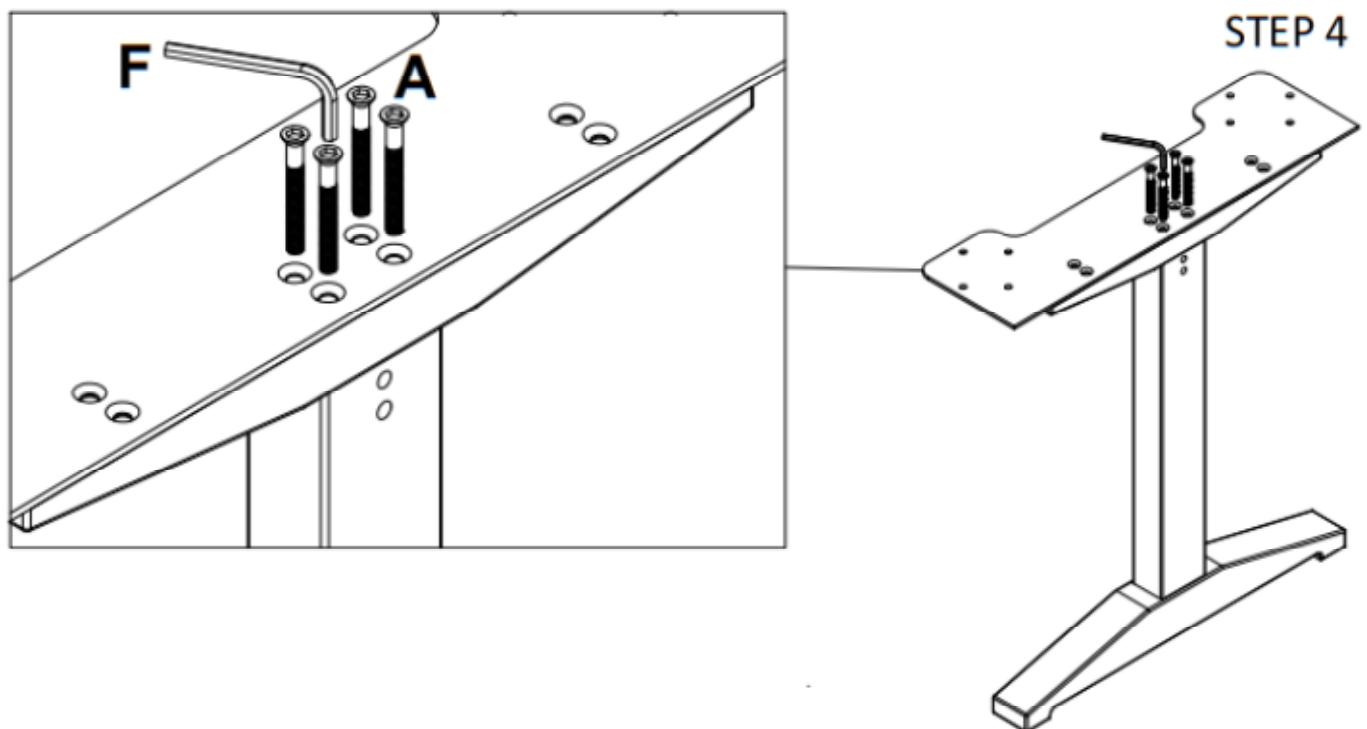

STEP 5

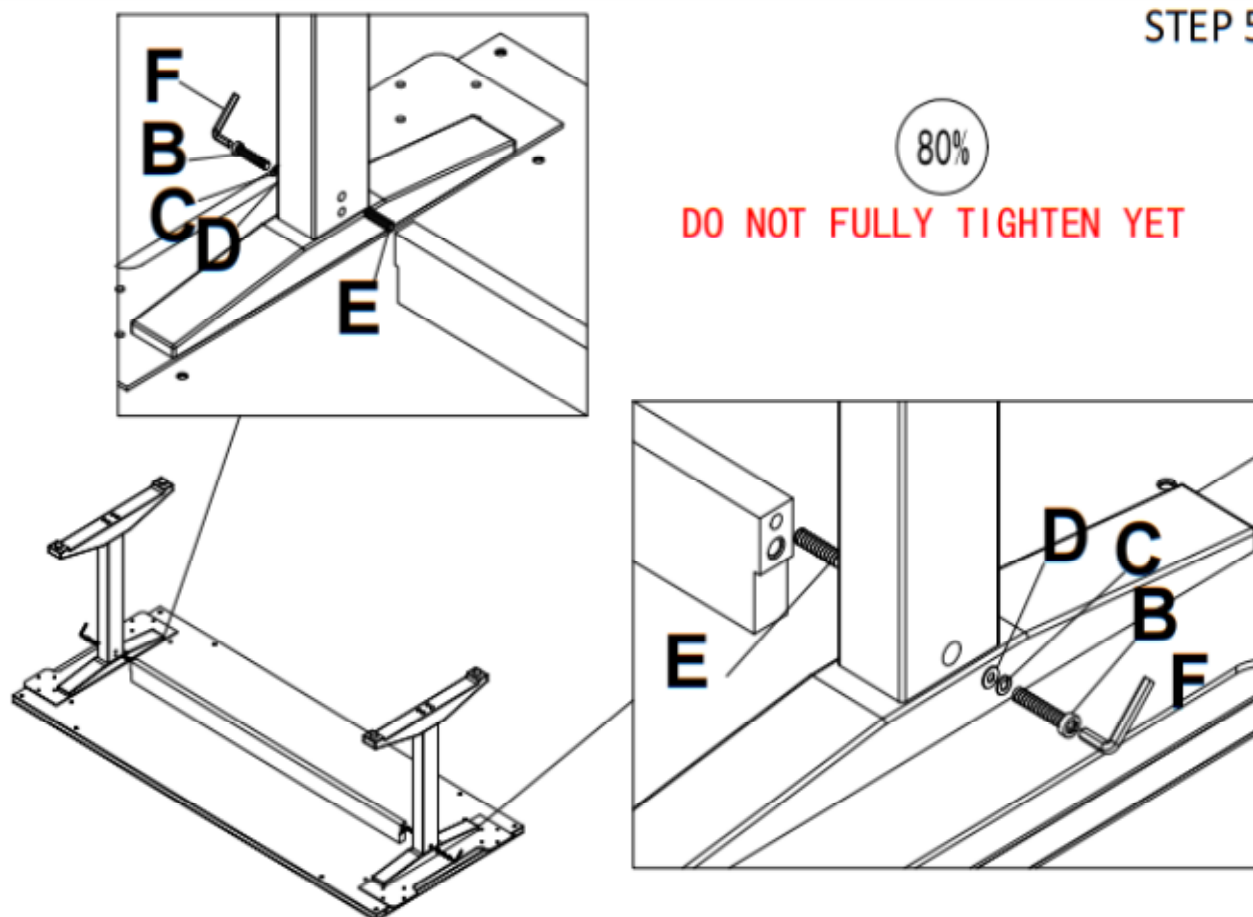


STEP 6

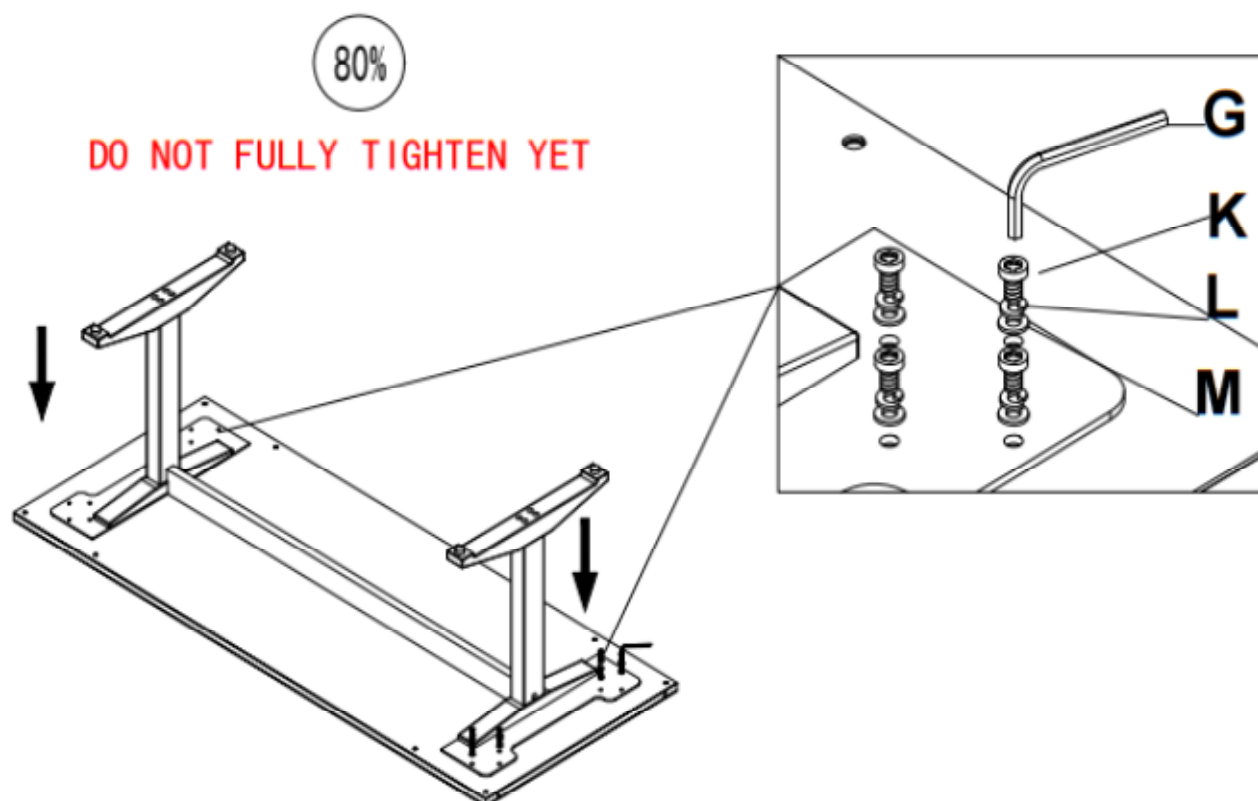

STEP 7

THE SUPPORT BAR BOLTS MUST
BE TIGHTENED FIRST,
BEFORE METAL PLATE BOLTS.

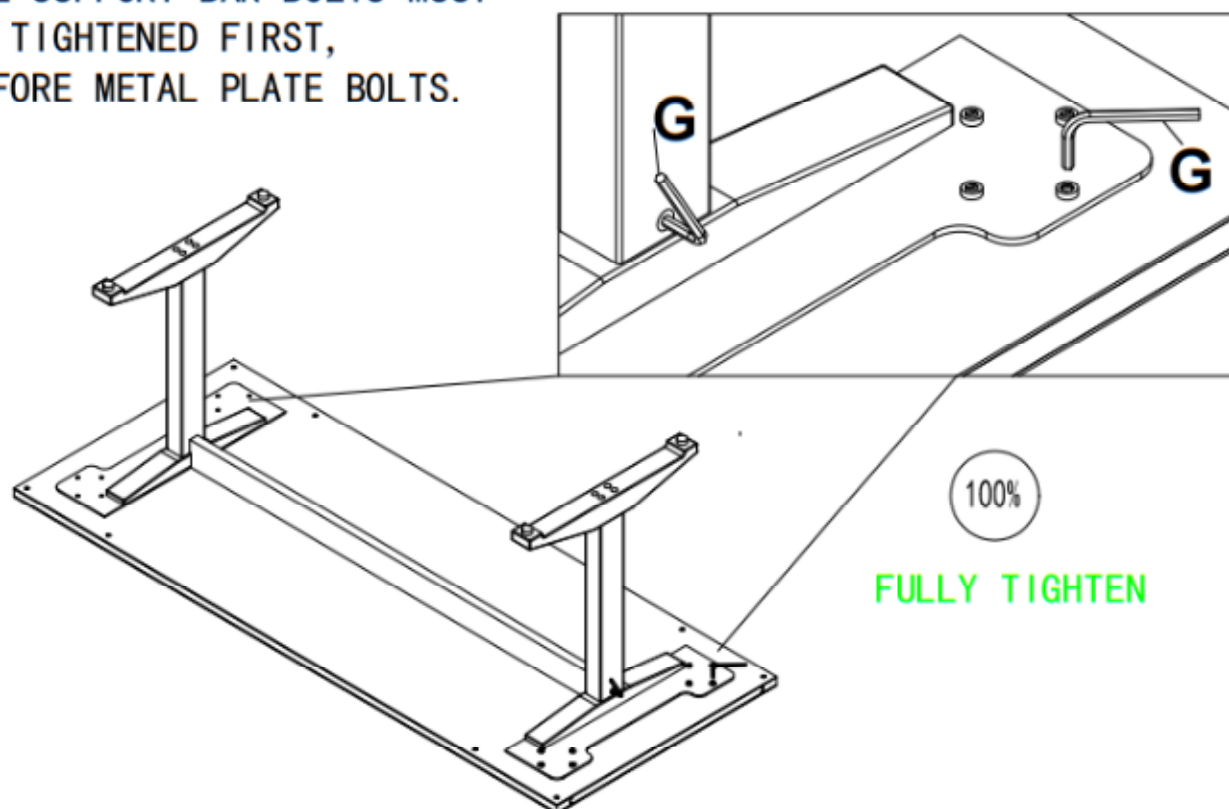

STEP 8

